



← Parts list

To modify/adjust you ball joint

Remove the retaining ring, and lock washer, adjust ball joint nut as needed.



If tightened up to the ball joint pin, loosen the ball joint nut $\frac{1}{4}$ to $\frac{1}{3}$ turns (90° - 120°)



Place the lock washer into the housing and make sure it is completely seated.



Then reinstall the retaining ring, and re-grease if needed, and replace the dust cover and o-ring, if applicable.

Your ball joint should be fully adjusted and assembled at this point.

