



Made for first. Built to last.

DISCLAIMER:

PRODUCTS MADE BY L AND W FAB AND MACHINE INC. ARE INTENDED TO FIT YOUR STOCK UTV UNLESS OTHERWISE SPECIFIED. INSTALLING, MODIFYING, OR REMOVING ANY COMPONENTS (FACTORY OR AFTERMARKET) NOT SUPPORTED BY L AND W AND THE INSTRUCTIONS HEREIN WILL VOID YOUR WARRANTY. FOR MORE INFORMATION ON INSTALLATION, WARRANTY, OR PRODUCT USE PLEASE CALL US AT (770) 445-9778

## Polaris RZR PRO R ADJUSTABLE RADIUS RODS

Fitment: 2022- PRO R




INSTALLATION MANUAL

# Parts List:

Item #	Description	Qty.
1	UPPER RADIUS ROD	2
2	LOWER RADIUS ROD	2
3	¾ RH HEIM W/JAM NUT	2
4	¾ LH HEIM W/JAM NUT	2
5	UNIBALL MISALIGNMENT SPACER (LOWERS)	8
6	HEIM MISALIGNMENT SPACER (UPPERS)	8

## MISALIGNMENT SPACER REFERENCE

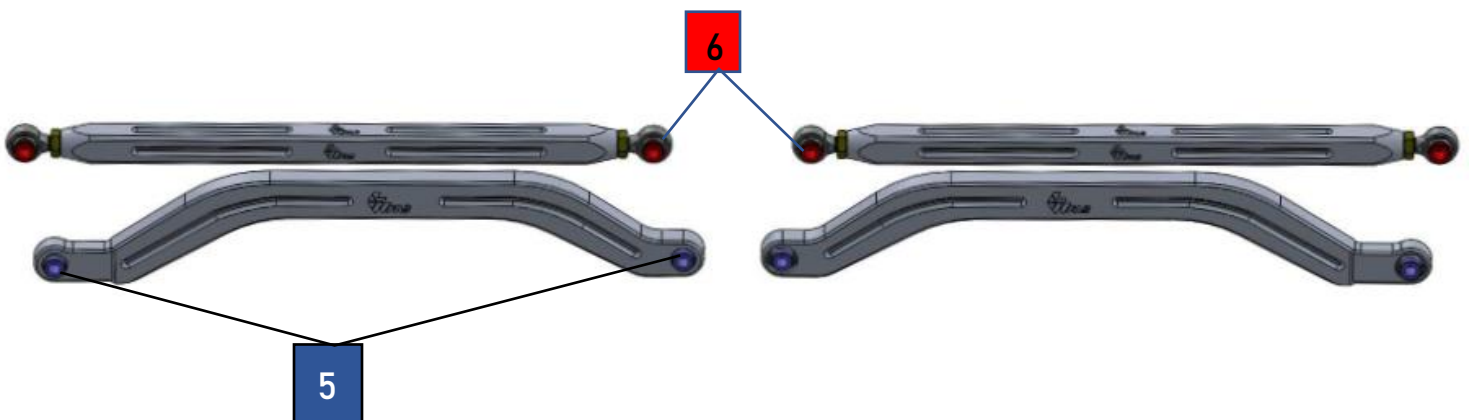

# Installation:

## STEP 1:

Jack machine up and remove wheels.


## STEP 2:

Using a 21mm socket and wrench, remove the 8 factory radius rod bolts. Remove old radius rods and prepare to install your new L&W Rods.

Overlay or measure upper rods with the new adjustable uppers. If your factory rod is bent, start at adjusting the rods to 29-3/8" from center of heim to center of heim.

## STEP 3:

Install the supplied misalignment bushings into your new arms. Refer to Figure 1 below for placement of Misalignment bushings.

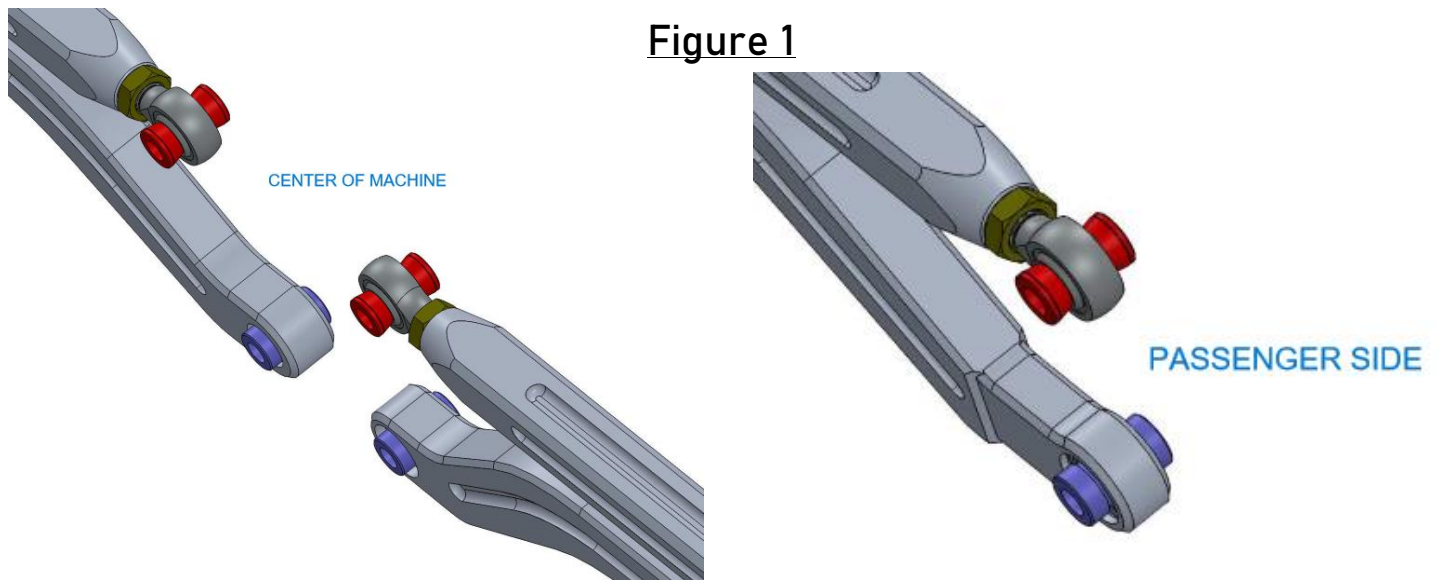

## STEP 3:

With the misalignments in place, install the rods back on machine using the factory bolts you removed in step 1. The bushings are designed to be a very snug fit. A dead blow hammer and line up bar will help with persuading the arms into place.

## STEP 4:

With everything in place, and bolts started, torque all bolts to 80 ft/lb.

**STEP 5:**

Reinstall wheels. Be sure to drive the machine around to let the suspension settle. After suspension is settled, Adjust camber with upper rod until satisfied.



**THANK YOU FOR CHOOSING L&W FAB!**