




**RM5 PLOW MOUNT INSTRUCTIONS
HONDA PIONEER
PART# 4501-0864**

ITEM	PART#	QTY.	DESCRIPTION
1	4489-70	1	Plow Mount
2	HDW2145	2	3/8 x 2 x 3 Rd. U-Bolt
3	HDW7061	4	3/8 Nylock Nut
4	HDW9001	4	3/8 Flat Washer
5	HDW1069	2	10mm x 30mm Hex Bolt

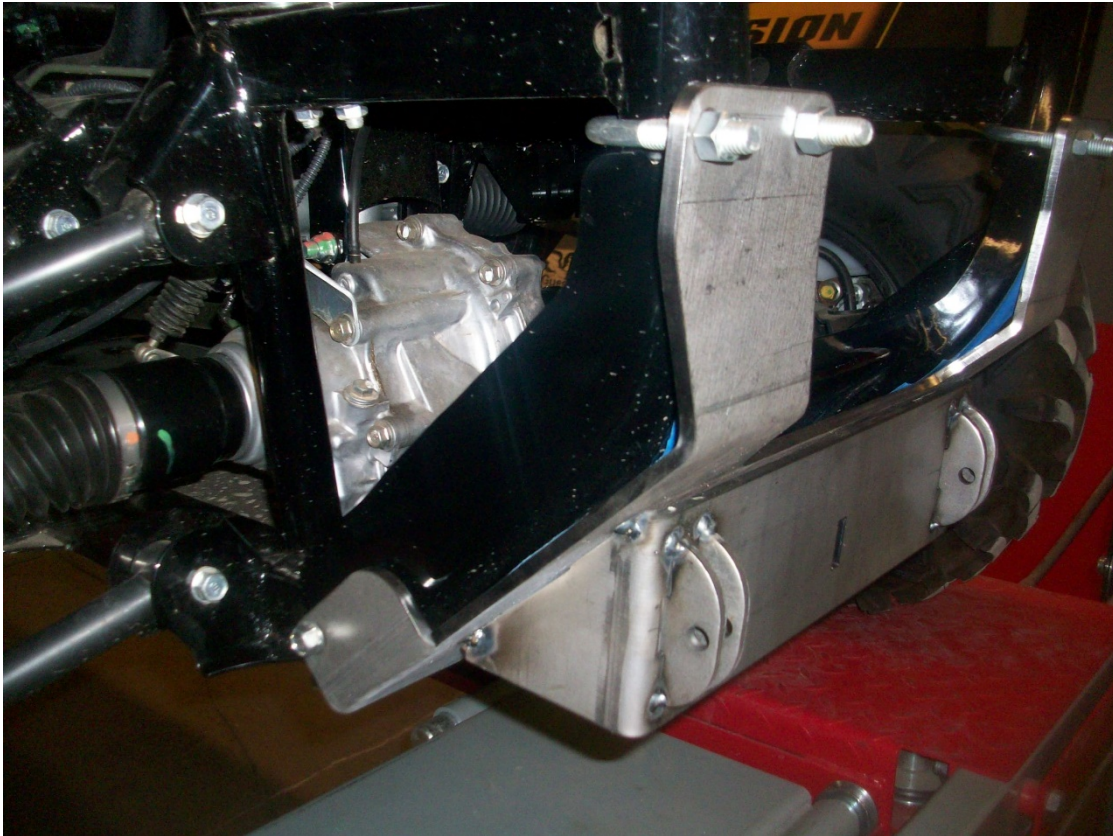

Remove the front lower bumper plate bolts on each side of the machine.

Place plow mount up in place and use the 10mmx 30mm hex bolts to attach bottom portion of mount plate to where you removed the bumper plate bolts.

Attach the top portion with the U-bolts going around bumper tube and through the mount and secure with washers and nylock nuts. Now tighten all bolts securely.

NOTE: Push tube will pin up with wire loop pins that came in push tube box.

Watch on how far you can lift your plow and do not over lift or may cause severe damage to the unit and or machine.