

# POWER VISION

Installation Guide for:  
PV3-16-03, PV3-16-14

Model Coverage:

2019-2022 Honda Talon R

2019-2022 Honda Talon X

2020-2022 Honda Talon X-4

## PARTS LIST



- |   |                 |   |               |
|---|-----------------|---|---------------|
| 1 | POWER VISION    | 2 | VELCRO        |
| 1 | REFLASH HARNESS | 2 | DYNOJET DECAL |
| 1 | USB CABLE       |   |               |


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**




98200124.09



# INTRODUCTION

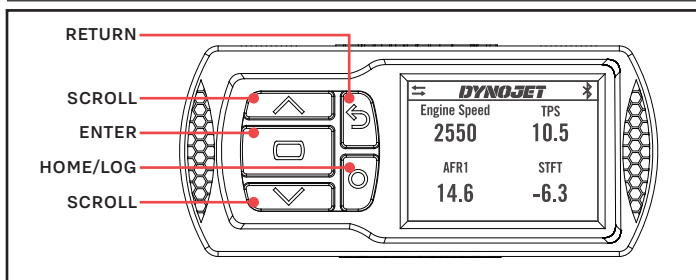

POWER VISION OVERVIEW—FRONT VIEW

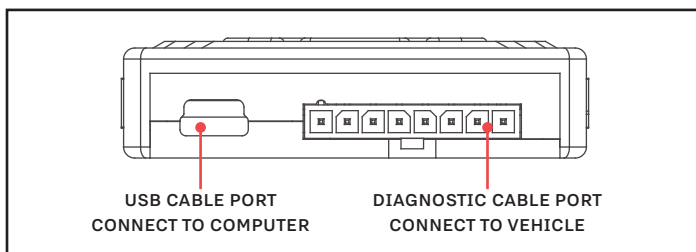

POWER VISION OVERVIEW—SIDE VIEW

Thank you for purchasing the Power Vision from Dynojet Research. At Dynojet, our mission is to make every ride the ultimate ride. The Power Vision allows you to tune your stock ECU to achieve optimal performance from your vehicle.

The Power Vision is the device to interface between your computer and the vehicle ECU. Use the buttons to navigate the device menus, make selections, cycle through the four full-color available gauge screens, and log data. Connect to the diagnostic port to flash a tune; use the USB connection to interface between the Power Vision and your computer.

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Make the Power Vision your window into your vehicle; secure the Power Vision to your dashboard or handlebars to monitor any desired set of gauges such as Throttle Position, Engine Speed, and more. Wideband Air:Fuel Ratio can be added as a channel to the PV3's monitors by adding the accessory available at [www.dynojet.com](http://www.dynojet.com).

For state of the art technical support, please visit [www.dynojet.zendesk.com](http://www.dynojet.zendesk.com).

## INSTALLING THE POWER VISION



INSTALL POWER VISION



DIAGNOSTIC PORT—FOUR SEAT



DIAGNOSTIC PORT—TWO SEAT

- 1 Secure the Power Vision to the vehicle using the supplied Velcro. Make sure the Power Vision will not interfere with the operation and steering of the vehicle.

Visit [www.dynojet.com](http://www.dynojet.com) for an array of mounting solutions for your Power Vision.

**Note:** The Power Vision does not need to be mounted to the vehicle, however, the Power Vision provides a window into your vehicle. Mount the Power Vision to your dashboard or handlebars and gain access to customizable full-color gauge screens, along with data logging and troubleshooting screens.

- 2 Attach the diagnostic cable to the diagnostic port on the Power Vision and to the diagnostic port on the vehicle.  
Talon Four Seat Models: located under the driver's seat.  
Talon Two Seat Models: located under the driver's seat, under a rubber flap cover.

**Note:** Leave the 4-pin CAN connector disconnected. This connector is only used with the Wideband module for Honda (P/N WB-PV16-1).

# GETTING STARTED

Use the Tune File Wizard to prepare your Power Vision device with the stock (.stk) and tune (.djt) files needed to flash your vehicle.

- 1 Connect the Power Vision to the vehicle.
- 2 Turn the key on. The Power Vision will scan for files.

There are three possible file states:


**File State 1:** No compatible tune or stock files.

**File State 2:** No compatible tune files.

**File State 3:** All required files found.

- 3 Gauges are displayed.

Connect the Power Vision to the vehicle diagnostic port to collect ECU information. Turn the key on.

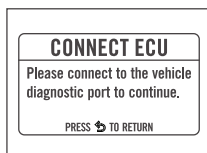

## File State 1:

Go to [tunes.dynojet.com/](https://tunes.dynojet.com/) to download stock and tune files.

## File State 2:

Go to [tunes.dynojet.com/](https://tunes.dynojet.com/) to download tune files.

## File State 3:

All required files found. The Power Vision is ready to flash a tune to the connected vehicle.

### GETTING STARTED

NO COMPATIBLE STOCK FILES

To download tunes, visit:  
[TUNES.DYNOJET.COM/](https://tunes.dynojet.com/)  
PRESS  TO SEARCH AGAIN

### GETTING STARTED

NO COMPATIBLE TUNE FILES

To download tunes, visit:  
[TUNES.DYNOJET.COM/](https://tunes.dynojet.com/)  
PRESS  TO SEARCH AGAIN

### READY TO FLASH

ALL REQUIRED FILES FOUND

PRESS  TO READ ECU  
PRESS  TO EXIT WIZARD

# FLASHING YOUR VEHICLE

The Power Vision must be paired to the connected vehicle ECU to function properly.

**Note:** Once paired to the vehicle ECU, the Power Vision will not work on another vehicle without purchasing a tune license.

- 1 From the Main Menu, select **Flash Tune**.
- 2 Select the tune file (.djt) and press **Enter** to view the Tune Info. The Tune Info screen contains the technical notes showing what was changed in the tune.


**Note:** The PV3 filters out files which are not compatible with the connected vehicle based on year/trim delivered direct from the factory and result in varied tune Compat and CheckSum within the ECU. Additional files may be visible on the device when connected via USB or on the website; however, the PV3 will only display files which directly fit your vehicle.

**Note:** The Dynojet tune file (.djt) is a tune file which is different (better than stock performance or the necessary file when bolting on an exhaust, for example); the stock file (.stk) is the direct duplicate of what the OEM shipped.

- 3 Press **Enter** to accept the tune, or restore the ECU to original stock (.stk) file, and pair the Power Vision to the vehicle.

**Note:** Pair to vehicle will only happen on the first flash.

- 4 Press **Enter** to pair and lock the Power Vision to the ECU and to begin the flash. Do not turn off the key switch or disconnect the Power Vision during the flash.
- 5 After the flash is complete, turn the key off and wait 45 seconds before turning the key back on to start.

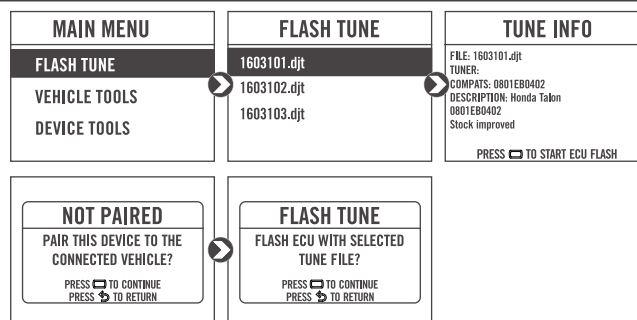

# VIEWING THE VEHICLE INFORMATION

This menu allows you to view the device status (paired/not paired), VIN #, Model ID, ECU serial number, tune compat, and checksum compat.

Select **Vehicle Tools>Vehicle Information**.

MAIN MENU	VEHICLE TOOLS	VEHICLE INFO
FLASH TUNE	VEHICLE INFORMATION	PAIRED VEHICLE: 4XAAE876GB69588
VEHICLE TOOLS	DIAGNOSTICS	VIN: 2200010143501EAA
DEVICE TOOLS	DELETE DATA LOGS	MODEL ID:
		ECU SN: EC13E67305E5875A
		TUNE COMPAT: 0801EB0402
		CSUM COMPAT:

# VIEWING THE DIAGNOSTIC CODES

This menu allows you to read and clear diagnostic trouble codes.

1 To read codes, select **Vehicle Tools>Diagnostics>Active Codes**.

2 To clear codes, select **Vehicle Tools>Diagnostics>Clear Codes**.

MAIN MENU	VEHICLE TOOLS	DIAGNOSTICS
FLASH TUNE	VEHICLE INFORMATION	ACTIVE CODES
VEHICLE TOOLS	DIAGNOSTICS	HISTORIC CODES
DEVICE TOOLS	DELETE DATA LOGS	CLEAR CODES

# RESTORING THE ECU

This menu allows you to restore the ECU. Use Restore ECU if the device does not complete the flash or if your vehicle will not start.

Select **Vehicle Tools>Restore ECU**.

MAIN MENU	VEHICLE TOOLS	RESTORE ECU
FLASH TUNE	DIAGNOSTICS	RESTORE ECU TO ORIGINAL STK FILE?
VEHICLE TOOLS	DELETE DATA LOGS	PRESS  TO CONTINUE
DEVICE TOOLS	RESTORE ECU	PRESS  TO RETURN

# RESET ADAPTIVES

This menu allows you to clear the trims which the narrowband sensor has learned throughout prior drive cycles.

Select **Vehicle Tools>Reset Adaptives**.

MAIN MENU	VEHICLE TOOLS	VEHICLE TOOLS
FLASH TUNE	RESET ADAPTIVES	ADAPTIVES RESET
VEHICLE TOOLS	RELEARN DCT	PRESS  TO RETURN
DEVICE TOOLS	SET DYNO MODE	

# RELEARN DCT

Use Relearn DCT when the MT/AT shift lights are illuminated solid on the dash or if the vehicle's transmission needs service or a module was replaced. The DCT relearned sequence does not show up right away.

1 Verify the vehicle is up to operating temperature.

2 Select **Vehicle Tools>Relearn DCT**.

MAIN MENU	VEHICLE TOOLS	VEHICLE TOOLS
FLASH TUNE	RESET ADAPTIVES	DCT RELEARNED
VEHICLE TOOLS	RELEARN DCT	PRESS  TO RETURN
DEVICE TOOLS	SET DYNO MODE	

# SET DYNO MODE

This menu allows you to have the vehicle ignore the front wheel speed sensor(s) for stationary dyno tuning while allowing the transmission to shift as normal.

Select **Vehicle Tools>Set Dyno Mode**.

MAIN MENU	VEHICLE TOOLS	VEHICLE TOOLS
FLASH TUNE	RESET ADAPTIVES	SET DYNO MODE SUCCESSFUL
VEHICLE TOOLS	RELEARN DCT	PRESS  TO RETURN
DEVICE TOOLS	SET DYNO MODE	

# CONFIGURING GAUGES

Make your Power Vision device yours; display the channels you want to see with four user-customizable full-color gauge screens. Each gauge screen has one, two, or four configurable channels. Monitor channels such as Wideband, AFR, and Boost. Sample gauges shown here; for a complete list of monitors available, open the tune file in Power Core or scroll through the gauges on the device when configuring or selecting channels for the list of options.

- 1 From the Main Menu, select **Device Tools>Configure Gauges**.
- 2 Select a gauge screen and press **Enter**.
- 3 Select a channel and press **Enter**.
- 4 Select a channel from the list and press **Enter**.
- 5 Select the precision or units for that channel and press **Enter**.
- 6 Continue setting up the remaining channels as desired.
- 7 Continue configuring the remaining gauge screens as desired.

<b>MAIN MENU</b>	<b>DEVICE TOOLS</b>	<b>CONFIGURE GAUGES</b>
FLASH TUNE	<b>CONFIGURE GAUGES</b>	SCREEN 1
VEHICLE TOOLS	DEVICE INFORMATION	SCREEN 2
<b>DEVICE TOOLS</b>	REFORMAT DISK	SCREEN 3
		SCREEN 4

<b>CONFIGURE SCREEN</b>	<b>SELECT UNIT</b>	<b>SELECT PRECISION</b>
CHANNEL 1	RPM	0
CHANNEL 2	RPMx10	0.0
CHANNEL 3	RPMx100	0.00
CHANNEL 4	RPMx1000	0.000

<b>DYNOJET</b>	<b>DYNOJET</b>	<b>DYNOJET</b>
Engine Speed	Engine Speed	Module Volts
<b>4225</b>	<b>4225</b>	<b>13.8</b>
	AFR1	EOT
	<b>14.6</b>	<b>181</b>
		IAT
		<b>65.2</b>
		Inj. DC
		<b>35.5</b>

# LOGGING DATA

The Power Vision is a powerful logging tool to diagnose running issues. Use the Power Vision to log all vehicle operating data and review the data in the Power Core software. Troubleshoot an issue with excessive knock or a throttle blade closure by keeping the Power Vision mounted to view and record channels.

- 1 Press the **Log** button to begin logging. The Power Vision screen will illuminate a bright red banner across the top when logging.

- 2 Press the **Log** button again to stop logging.

- 3 Use the Power Core software to view log files.

**Snapshot Log:** Press and hold the **Log** button for two seconds to record the previous two minutes of operating time.

<b>DATA LOG</b>	<b>DYNOJET</b>	<b>SAVING LOG</b>
DATA LOGGING HAS STARTED. PRESS AGAIN TO STOP	Engine Speed	SAVING LOG...
	<b>4225</b>	
	AFR1	
	<b>14.6</b>	
	STFT	
	<b>-2.6</b>	

<b>DATA LOG</b>
1603101_LOG_1.wp8
SAVED SUCCESSFULLY

# DELETING DATA LOGS

This menu allows you to delete data logs.

- 1 Select **Vehicle Tools>Delete Data Log**.
- 2 Select a specific log to delete or select **\*Delete All Logs\***.

<b>MAIN MENU</b>	<b>VEHICLE TOOLS</b>	<b>LOG FILES</b>
FLASH TUNE	DIAGNOSTICS	*Delete All Logs*
<b>VEHICLE TOOLS</b>	<b>DELETE DATA LOGS</b>	1603101_LOG_1.wp8
DEVICE TOOLS	RESTORE ECU	1603101_LOG_2.wp8
		1603101_LOG_3.wp8

# VIEWING THE DEVICE INFORMATION


This menu allows you to view the device firmware version, serial number, and stock code.

Select **Device Tools>Device Information**.

<b>MAIN MENU</b>	<b>DEVICE TOOLS</b>	<b>DEVICE INFORMATION</b>
FLASH TUNE	<b>CONFIGURE GAUGES</b>	DYNOJET POWER VISION
<b>VEHICLE TOOLS</b>	<b>DEVICE INFORMATION</b>	FW VERSION: 5.16.8297.41698
DEVICE TOOLS	REFORMAT DISK	SERIAL NUMBER: PV00029757
		STOCK CODE: 76125082

# REFORMATTING THE DISK

This menu allows you to reformat the disk and erase all data.  
Select **Device Tools>Reformat Disk**.

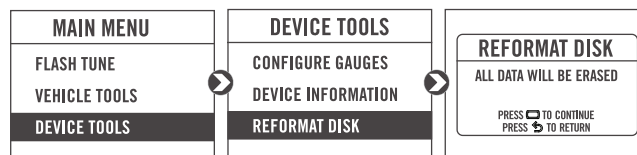


# CHANGING THE SETTINGS

This menu allows you to rotate the screen allowing you to change the orientation of the Power Vision device along with adjusting the screen brightness. Turn the brightness up and make your screen pop!

Select **Device Tools>Settings>Rotate Screen** to flip the screen.


Select **Device Tools>Settings>Brightness** to change the screen brightness.

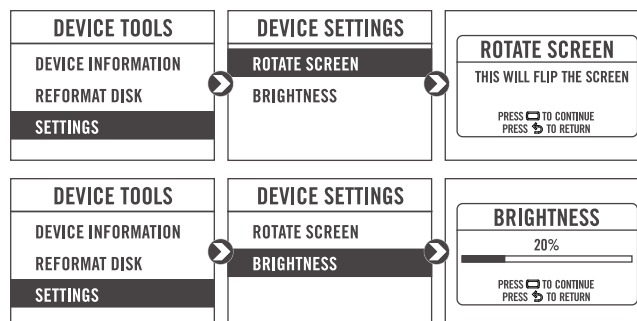

# UPDATING THE DEVICE

This menu allows you to update the device with the latest firmware.


- 1 Go to [www.dynojet.com](http://www.dynojet.com).
- 2 From the top navigation menu, select **Support>Downloads**.
- 3 Click **Power Vision 3**.
- 4 Click the **Firmware** drop-down and download the Power Vision 3 Firmware for Honda.
- 5 Save the file to your device.
- 6 Select **Device Tools>Update Device**.

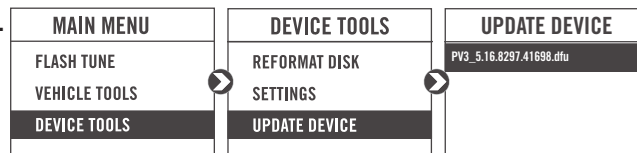

# DIAGNOSTIC ENABLE

This menu allows you to create a file containing device diagnostic information used by Dynojet Tech Support.

- 1 From the Main Menu, select **Device Tools>Diagnostic Enable**.  
This will turn on diagnostic logging. Logging will continue until the device is restarted.
- 2 If requested by Dynojet Tech Support, connect your Power Vision to a computer and email the diagnostic file to [PV3tech@dynojet.com](mailto:PV3tech@dynojet.com). Diagnostic log files are placed in the log files directory.

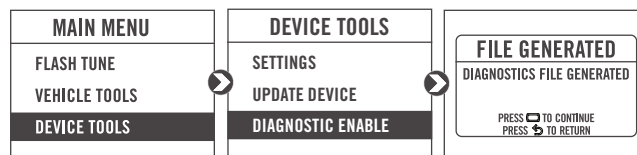


# USB MODE

This menu allows you to connect your Power Vision to your computer and enables sending and receiving files.

- 1 Connect the Power Vision to your computer using the included USB cable. The Power Vision will automatically enter USB Mode.  
OR

From the Main Menu, select **USB Mode**.

- 2 Transfer the desired files to your computer or to the Power Vision.

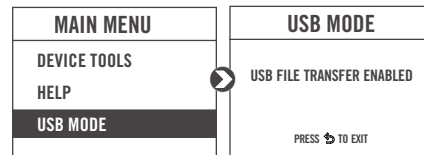

# USING THE POWER VISION UPDATE CLIENT

This stand alone application will launch the Update Client allowing you to update your Power Vision with the latest firmware, retrieve additional tunes, or restore the Power Vision to the original Dynojet factory settings.

- 1 Connect the Power Vision to your computer using the included USB cable.
- 2 Navigate to the POWERVISION drive attached to your computer and run the **Update.exe** file.
- 3 Click **Update** to load the current firmware. If the Update button is grayed out, your Power Vision already has the latest firmware.
- 4 Click **Restore** to reload all original Dynojet tune and stock files.
- 5 Click **Get Tunes** to open the Dynojet Tune Finder. Follow the instructions to Upload your PV\_Info.txt file and retrieve new tunes.
- 6 Click **Manual Firmware Update** to navigate to and load a version of firmware already saved on your computer.



# INSTALLING THE POWER CORE SOFTWARE

Download the Power Core software and take tuning to a whole new level.

**Note:** Downloading the Power Core software is optional and not necessary to use the Power Vision.

- 1 Go to [www.dynojet.com](http://www.dynojet.com).
- 2 From the top navigation menu, select **Support>Downloads**.
- 3 Click **Power Vision 3**.
- 4 Click the **Software** drop-down and download the Dynojet Power Core software.
- 5 Double-click the saved file to begin installation. Follow the on-screen prompts. Refer to the Power Core Help for more information.

