

## 24+ Maverick R Headlight Install Guide



## Heretic

1168 West 500 North Suite 500 Centerville UT, 84014 801-725-4824 Support@hereticstudio.com



**IMPORTANT:** Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner. Buyer is solely responsible for (and will indemnify and hold seller harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these installation instructions.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

## **Tools Needed for Install:**

**Basic Tool Set** 

- Panel Pry Tool
- 8mm, 7/16 Socket / Wrench
- Stubby Philips Screw Driver
- Torx Screw Driver Set

- Tape / Zip Ties
- Crimp Tool
- Wire Cutters

**Step 1:** Remove the headlight rear cover. Locate and remove 3 8mm screws holding the cover on to the vehicle. Next, locate the 8mm screw on the exterior side of the headlight and remove it. **1,2** 


Unclip and pull the front fascia away from the vehicle to locate the headlight's exterior mounting screw. Using a T-30 Torx screw driver, remove the bolt. Keep the bolt in a safe location as it will be used in the reinstall. **3** 


Locate the headlight adjustment screw below the headlight. Once located, remove the 8mm screw holding the assembly to the body of the vehicle. Take note of the location as it will be used for the install of the new headlight. 4

Locate the interior headlight mounting screw and using an 8mm wrench remove it. The screw is located between the interior side of the headlight and the radiator shroud. **5** 

Unplug the two harnesses connected to the back of the headlight and remove the OEM headlight.

Repeat the process on the remaining side.

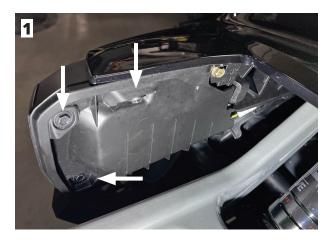

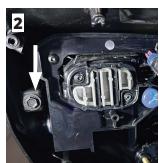







**Step 2:** Install the Headlight. First, the OEM spacer will need to be taken off of the OEM headlight and installed on the headlight mounting bracket. **6** 

Next, to Install the headlight, the mounting bolt nut and washer must be removed. These have been tighten to prevent any damage to the headlight during shipping and will be used for the install. **7** 

Install the headlight into the OEM opening and secure it with the exterior T30 screw first. This will help hold the headlight in while getting the other hardware installed. Next, feed the interior mounting screw in the hole left from taking the OEM screw out. Using a 7/16 wrench secure the nut and washer.

Using a stubby Philips head screw driver and the provided hardware, mount the bottom bracket into the OEM mounting posts. **8** 

The OEM headlight fuse will need to be replaced with the supplied 15A fuse. The fuse is located underneath the cowl in the center of the dash. The fuse is labeled as "Headlamp 10A." **9** 

With the fuse installed, plug the supplied harnesses into the lights and test the functionality. \*Note - the low beam, black plug, should be the inner most cylinder on each side.





**Step 3:** With the lights functional, make any adjustments to the angle of the lights and tighten all of the hardware. Next, zip tie the harnesses to the back of mounting bracket and reinstall all the OEM trim pieces and covers.

Your install is now complete! Thanks for choosing Heretic!

© (f) @hereticstudio

