



Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

- A. To begin installing the rear window. Locate the lower filler panel.

NOTE: Panel shown in Picture A is for a RZR XP 1000 2 seater. The RZR4 XP 1000 does not have the seat belt cut outs. See Picture B below. Installation, however, is the same.

Place the lower filler panel on the outside of the lower portion of the roll cage and in between the body panel. See Picture #1 and 1A. Notice there are eight tabs on the bottom of the lower filler panel. Be sure tabs are inserted into the OEM slots in the body panel. After lower panel is into position, place the five supplied 1 11/16 p-clamps over the roll cage near the pre-drilled holes in the lower panel. Press the two ends of the p-clamp together so they align with the pre-drilled holes in the installed lower panel. Once the holes are aligned insert a supplied 1/4 - 20 x 5/8 Torx Truss screw from the outside through the pre-drilled holes into the p-clamp and install a 1/4 - 20 Nylock nut over screw end. Loosely tighten until all hardware is installed. Don't over tighten.






Picture 1



Picture 1A

- B. See Picture #3, 3A and 3B for proper hardware installation on rear window. To install the rear window onto the roll cage, position rear window in between the cage and the roll cage extension where shock reservoirs are mounted. See Picture #4. Leaving clamps loose, slide clamps and window upward so the side bulb seal and notches out of the upper portion of the window is pushed upward to its limit.

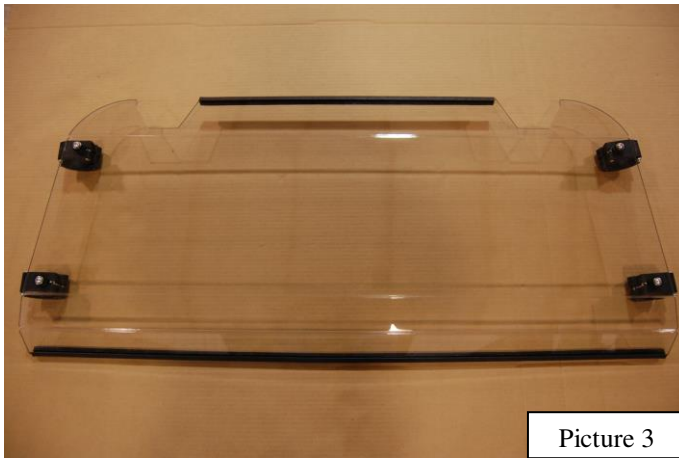


Picture 3



Top

Picture 3A

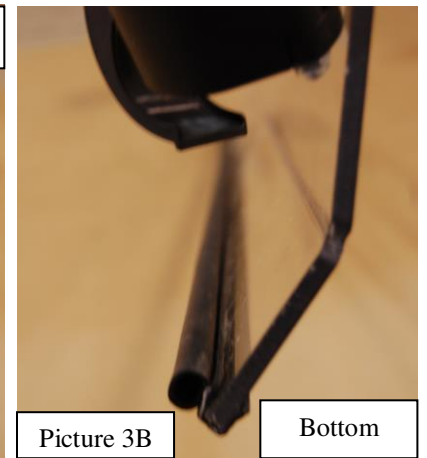

Bottom

Picture 3B



Picture 4