

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

Tool List

Phillips Head Screwdriver #27 Torx bit 3/8" Wrench


Soft Hammer

7/16"Wrench

Carefully remove seats and tops and place them to the side. For the RZR/S, you will remove both seats, for the RZR4, you will need to remove rear seats only.


To Install Lower Dust Shield


A. Locate the black lower dust shield. The textured side will face the bed and the smooth side will face inside. Using 2 - $1\frac{1}{2}$ " vinyl coated clamps, secure the panel to the roll cage using the supplied $\frac{1}{4}$ - 20- x 5/8" torx truss screws and $\frac{1}{4}$ x 20 nylock nuts. Finger tighten only. Next take the 2 - $1\frac{3}{4}$ vinyl clamps and secure the panel to the outside of the roll cage. See Picture 1. Adjust lower dust shield to where it is centered on rollcage. When centered, tighten $\frac{1}{4}$ - 20 truss screws. Next, use the supplied $\frac{\#10}{x}$ 5/8 phillip pan washer screws to attach the lower part of the panel. See Picture 2.

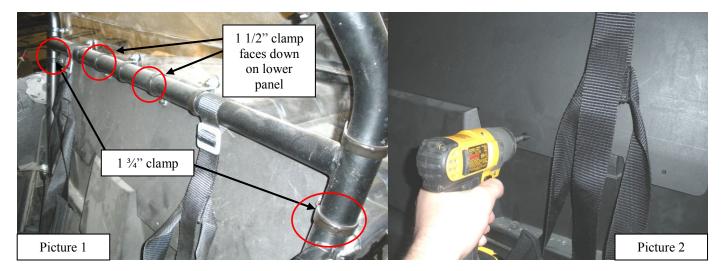


To Install Upper Rear Window

A. Carefully lay rear window panel on flat surface; peel back the protective sheeting around the outer edges <u>only</u> enough to reveal the pre-drilled mounting holes. <u>Do not peel the protective sheeting completely at this time</u>! See picture 3.

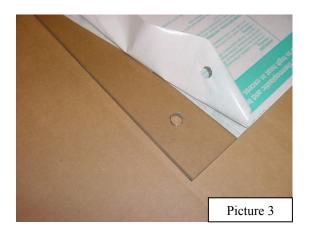


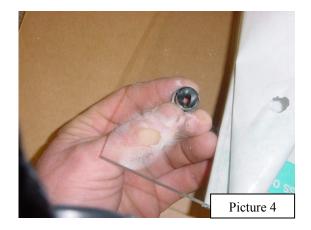


B. Insert supplied rubber grommets into the pre-drilled holes. See picture 4. Properly installed, the grommets' shoulder edges are uniform on both sides of the window. See picture 5.

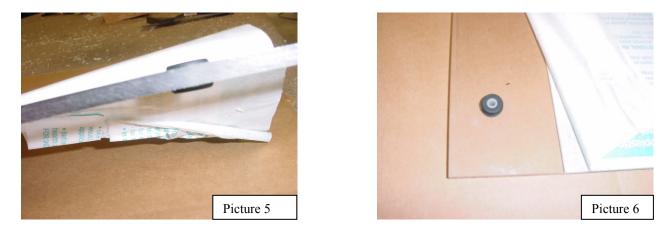


C. Place large white plastic sleeve spacers into rear window panel. See picture 6. With help, place window panel against the rear of the roll cage. The top of the window should center the horizontal bar on the roll cage. See Picture 7. Using the 1 ½" vinyl clamps, install the rear window on the horizontal roll cage bar. Insert the 10-24 x 1" screw through the supplied fender washer, then into the plastic sleeve space grommet, through the other washer and into the strap clamp. See Picture 8. Place nuts over screws and finger tighten. Follow same process to install the 1 ³/₄" clamps on vertical bars.

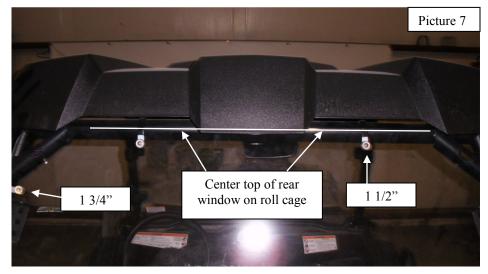


Original

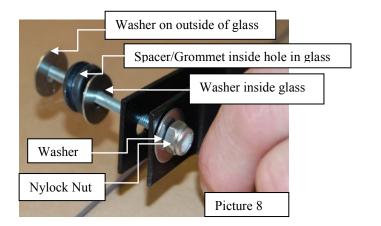

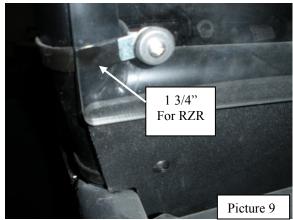

A. Adjust windshield to where it is centered on the roll cage and overlapping lower dust panel. The RZR/S and the RZR4 clamps on the outside edges are oriented slightly different - See Picture 9 for RZR/S, see Picture 9A for RZR4. Also on the RZR/S, you will use 1 ³/₄" clamps on the outside edges; for the RZR4, you will use 1 1/2" clamps. You will use 1 ¹/₂" clamps on both the RZR/S and RZR4 for the remainder of the installation. See Picture 10. Carefully tighten screws. Do not over tighten clamps. Clamp ends should not touch or you will eventually break the rear window.

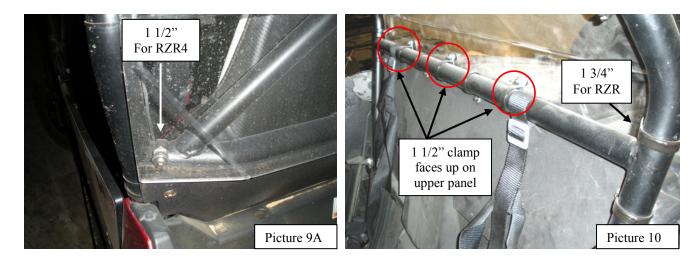



Enjoy! Any questions, contact Trail Armor at 662-462-4222