



**Installation Instructions for** **Honda Talon 1000 R**  
**iMpaCt Trailing Arm Guards**  
**TA012IMPTAG-HT1000R**

**Warnings and Product Liability Disclaimer**


This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.



- A. Remove wheels and tires prior to beginning for easier install. Always secure vehicle with safety stands.

**Trailing Guards**

- B. Locate the Trail Armor passenger side trailing arm guard (HT1K-PR). Also, locate three supplied #14 x 1" TEK self-drilling screws and three supplied bowl washers. Slide the trailing arm guard up against the front weld of the trailing arm. A small c-clamp or bar clamp can be used to hold the guard into position while inserting the self-drilling screws. Holding trailing arm guard into place, insert one 1" TEK screw and bowl washer into each of the pre-drilled holes into the trailing arm. See Picture 1. Tighten all fasteners securely, but do not overtighten. Repeat for the driver side. See Picture 2 for final install.

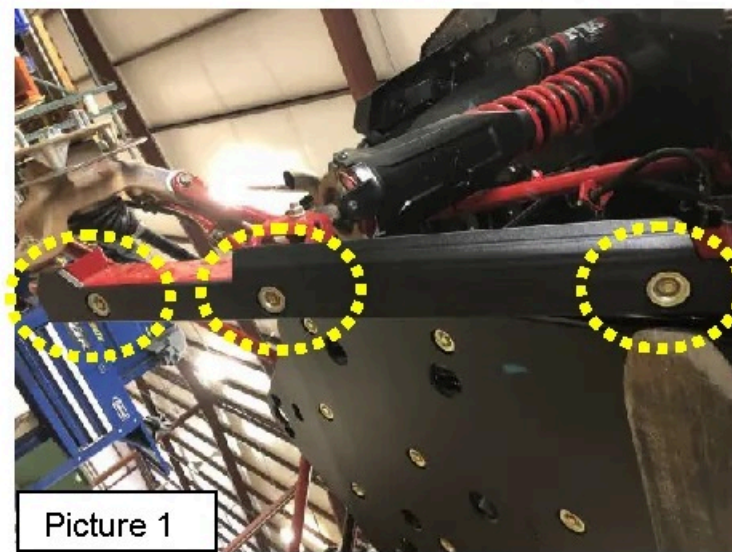

Picture 1



Picture 2

C. Replace tires and wheels, tighten securely, and check all lug nuts.

Enjoy! Any questions, contact Trail Armor at 662-233-5700 or [www.trailarmor.com](http://www.trailarmor.com).