





Installation Instructions for **Honda Talon 1000 R**
iMPact Front A-Arm Boot Guards
TA012ARMIMPFG-HT1000R

Warnings and Product Liability Disclaimer


This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

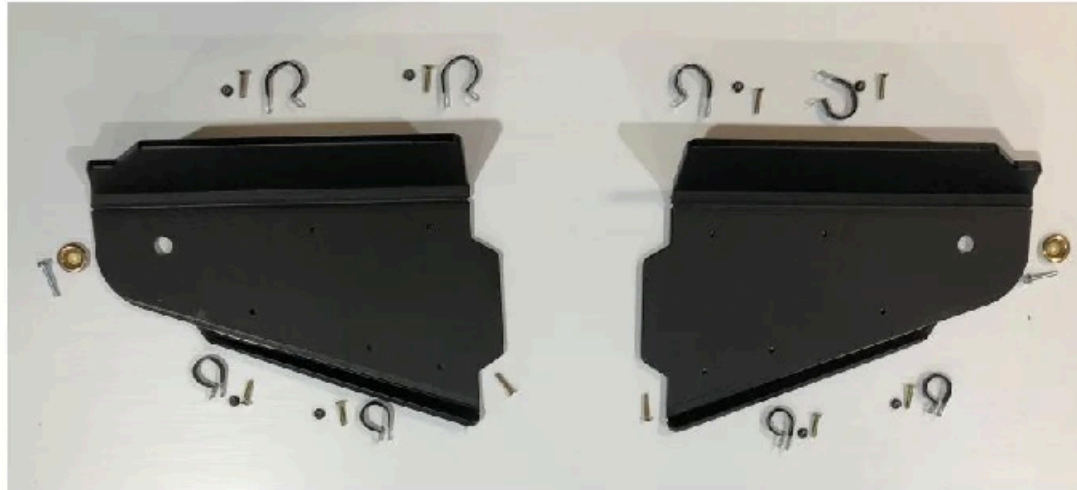

- A. Remove wheels and tires prior to beginning for easier install. Always secure vehicle with safety stands. Remove the bottom factory screw from the factory guards on both sides. Leave factory guards intact.
- B. Locate the supplied packs of P-Clamps. **NOTE-There are two different size clamps, so be extremely careful not to mix these up as they will only work as intended!!**
- C. Locate two supplied 1-1/8" P-Clamps. Place these onto the front factory a-arm bars as shown in Picture 1.

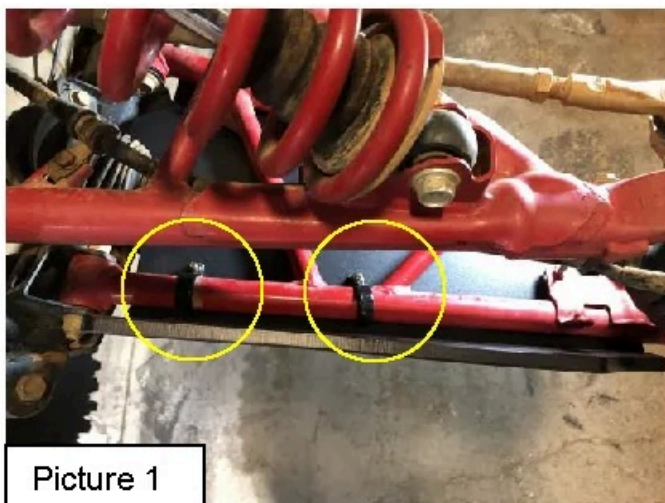


Picture 1

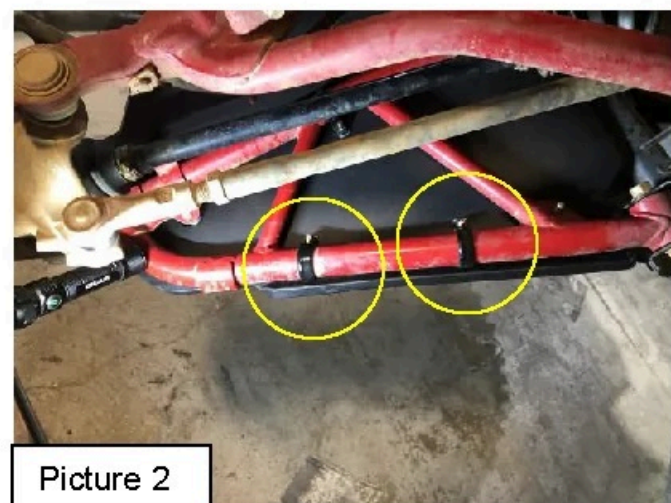

Picture 2

- D. Locate two supplied 1-1/4" P-Clamps. Place these onto the rear factory a-arm bars as shown in Picture 2.

- E. Locate the Trail Armor driver side a-arm guard (HT1K-DF). Also, locate one supplied m6-1.0 x 35 mm. flat head socket cap screw. Holding a-arm guard into place with the P-Clamps in the correct position, insert the 35 mm. cap screw from the bottom up through the inside rear pre-drilled hole of the guard into the factory bracket. See Picture 3. Loosely tighten.

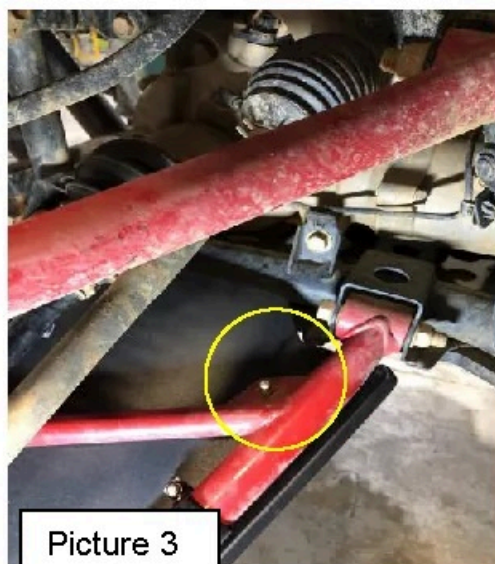


Picture 3



Picture 4

- F. Locate one supplied m6 x 40 mm. flange bolt and one supplied bowl washer. Insert the 40 mm. flange bolt through the bowl washer, through the outer pre-drilled hole of the guard, and through the factory boot guard into the factory brace. See Picture 4. Loosely tighten.
- G. Locate four supplied 1/4-20 x 1-1/4" flat head socket cap screws and four supplied 1/4-20 nylock nuts. Insert one cap screw through each of the remaining pre-drilled holes, through the P-Clamps, and secure with the 1/4-20 nylock nuts. See Picture 5. Starting with the fasteners which screw into the factory brackets, tighten all fasteners securely. Repeat for passenger side. See Picture 6 for final install.

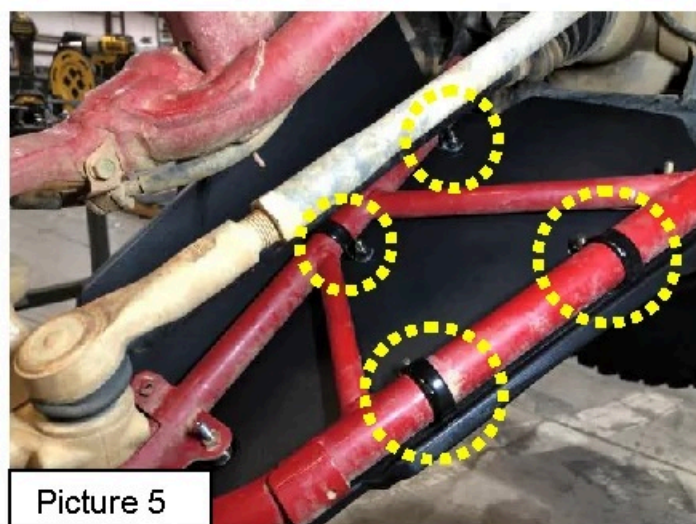

Picture 5



Picture 6

- H. Replace tires and wheels, tighten securely, and check all lug nuts!

Enjoy! Any questions, contact Trail Armor at 662-233-5700 or www.trailarmor.com.