
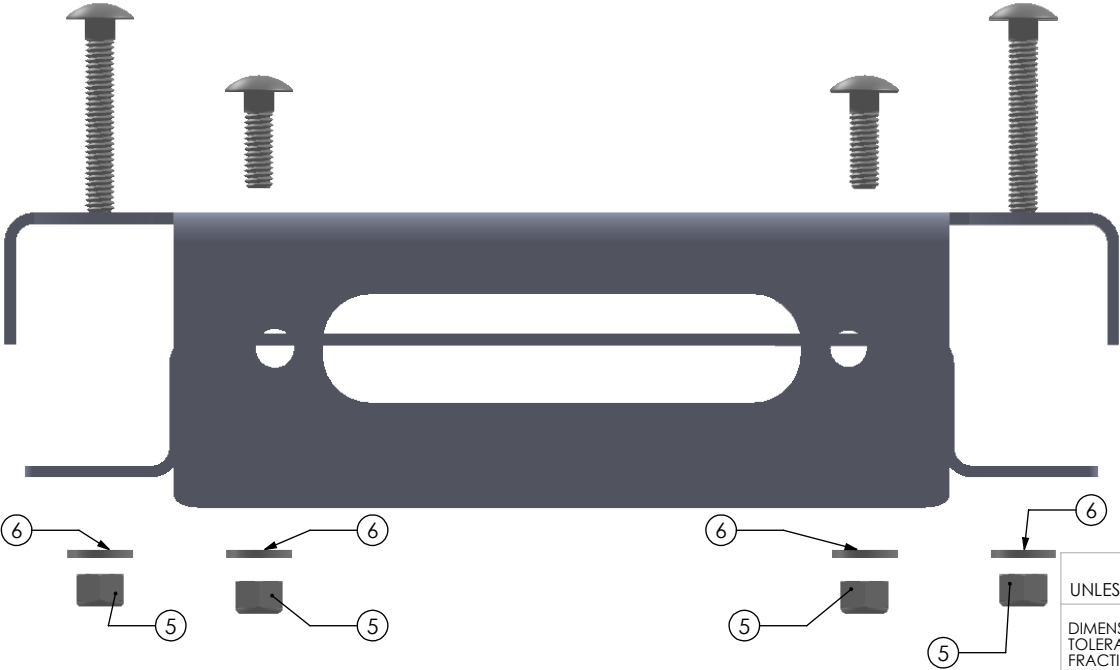


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	FAIRLEAD MOUNT TOP		1
2	FAIRLEAD MOUNT BOTTOM		1
3	90185A591	5/16 X 2 CARRIAGE BOLT	2
4	90185A583	5/16 X 1 CARRIAGE BOLT	2
5	97135A220	5/16 LOCK NUT	4
6	90126A030	5/16 WASHER	4

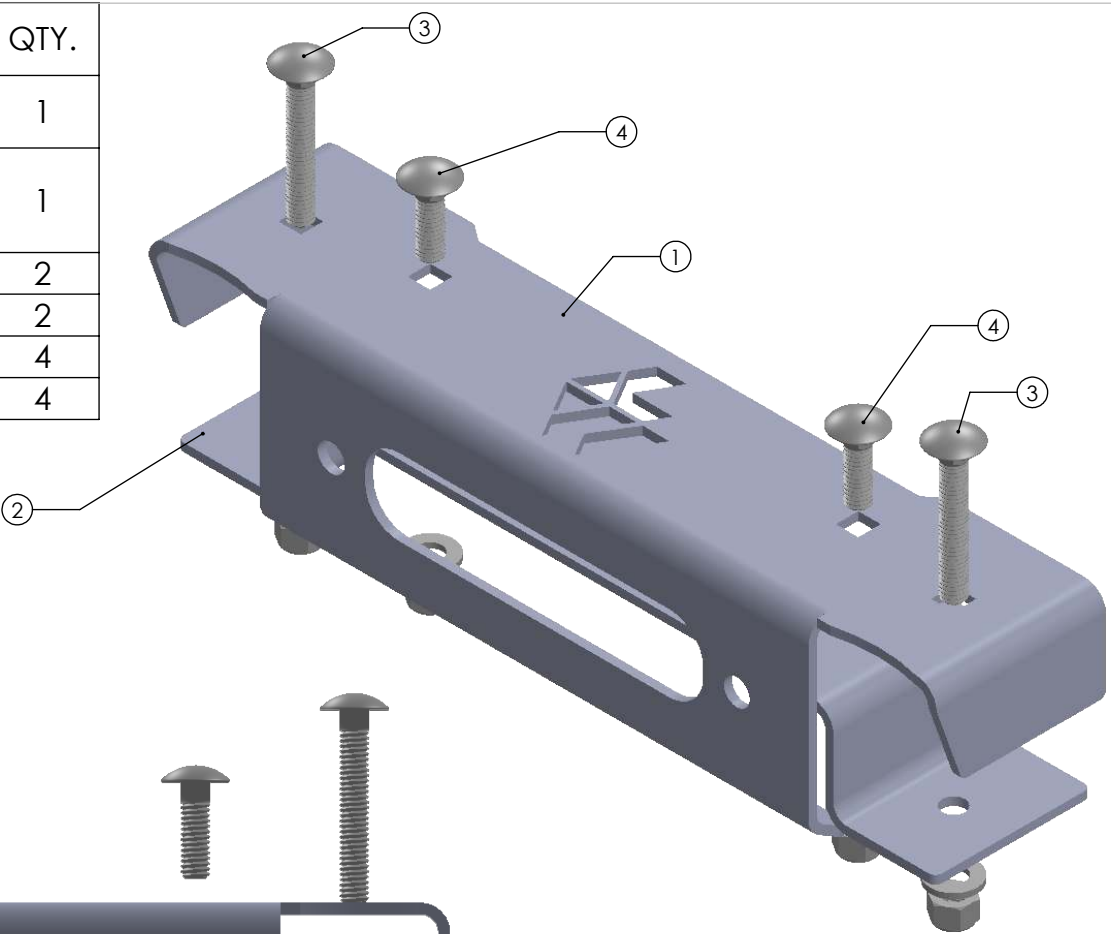

MOUNTS SANDWICH THE FACTORY BUMPER.
 PLACE THE MOUNT AS FAR FORWARD ON THE BUMPER
 AS POSSIBLE AND TIGHTEN THE (2) 5/16 X 1" BOLTS.

USING A 5/16 DRILL, DRILL THROUGH THE FACTORY BUMPER
 AND PLACE THE (2) 5/16 X 2" BOLTS THROUGH AND TIGHTEN
 DOWN

UNLESS OTHERWISE SPECIFIED:			
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL: $\pm 1/16$ ANGULAR: MACH $\pm .1$ BEND $\pm .5$ TWO PLACE DECIMAL $\pm .01$ THREE PLACE DECIMAL $\pm .005$		DRAWN: CHET G.	
MATERIAL		TITLE: TALON FAIRLEAD MOUNT	
SCALE: 1:5		WEIGHT:	SHEET 1 OF 1