

INSTALLATION GUIDE

Honda™ Talon Mount Kit: #6605



Fitment:

Installs driver and passenger ADS-1 seats into Honda™ Talon models 2019 - current.

PARTS INCLUDED


- 1 Ea L&R Driver Side Brackets
- 1 Ea L&R Passenger side Brackets
- 8 5/16" Carriage Bolts
- 8 5/16"-18 Nyloc Nuts
- 8 5/16" Flat Washers
- 8 5/16" Push Nuts

TO ENSURE YOUR SAFETY AND THE SAFETY OF OTHERS AND AVOID PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTE: STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS


STEP 1 Slide the stock *driver* seat into its forward position and pull up firmly on the base to remove and expose the frame.

STEP 2 Grab your 12mm socket and ratchet, and remove the four nuts holding the frame to the floor and carefully lift driver frame assembly from the vehicle (*figure 1*).

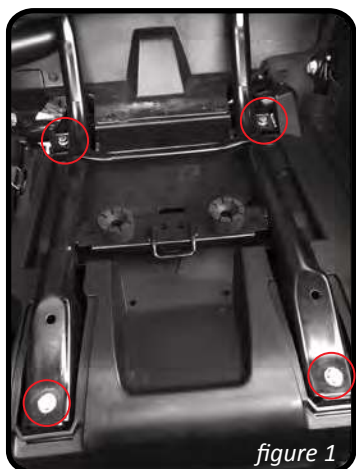

STEP 3 Install driver side angle brackets. Position as shown (*figure 2*), and re-install nuts removed in step 2.

STEP 4 Insert four carriage bolts into bottom of seat frame as shown (*figure 3*) followed by a push nut (use socket to push on), making sure the square shoulder of the carriage bolt engages the slot in the seat frame cross-bar (*figure 4*).

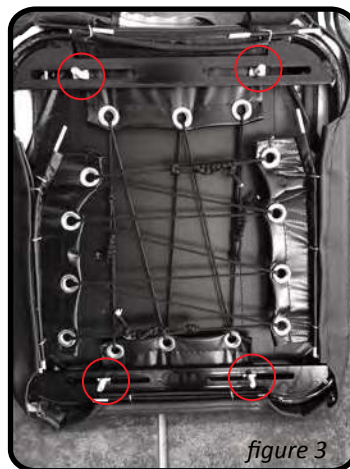

STEP 5 Place the driver seat onto the assembled brackets, guiding each carriage bolt into corresponding hole on each angle bracket and place a washer and lock-nut on each. Leave loose until all four are started, then tighten securely (*figure 5*).



STEP 6 As in step 1, remove passenger seat by pulling up firmly on the base assembly to expose the frame. Using a straight blade screwdriver, gently work the center pin up from each front cover clip (*figure 6*). With the clips removed, firmly pull straight up on each front cover to remove (*figure 7*).

INSTALLATION GUIDE

Honda™ Talon Mount Kit: #6605



figure 7

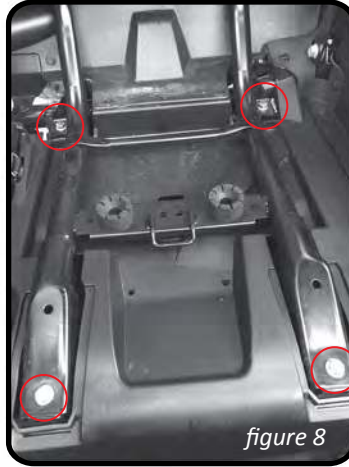


figure 8



figure 10



figure 11

STEP 7 Remove the two rear and two front nuts as indicated and lift out passenger seat (*figure 8*).

STEP 8 Position passenger side brackets as shown (note that the brackets are stamped left and right and the stamped arrows should point to the front of the car) studs into holes at the back, inside of OEM studs (*figure 9*).



figure 9

STEP 9 Re-install the 2 front OEM nuts removed in Step 7.

STEP 10 From underneath the rear of the car, install washers and lock nuts onto each of the rear studs-note locations indicated (*figures 10 & 11*).

STEP 11 Repeat the installation of the carriage bolts and push nuts outlined in STEP 4 then repeat the procedure from STEP 5 to mount the passenger side.

STEP 12 Verify that all fasteners have been thoroughly tightened, then enjoy your new Amped ADS-1 Seats!