
Installation Instructions Page 1 of 5



### 2019+ Honda Talon X Rear Double Shear Brackets # S3199-64

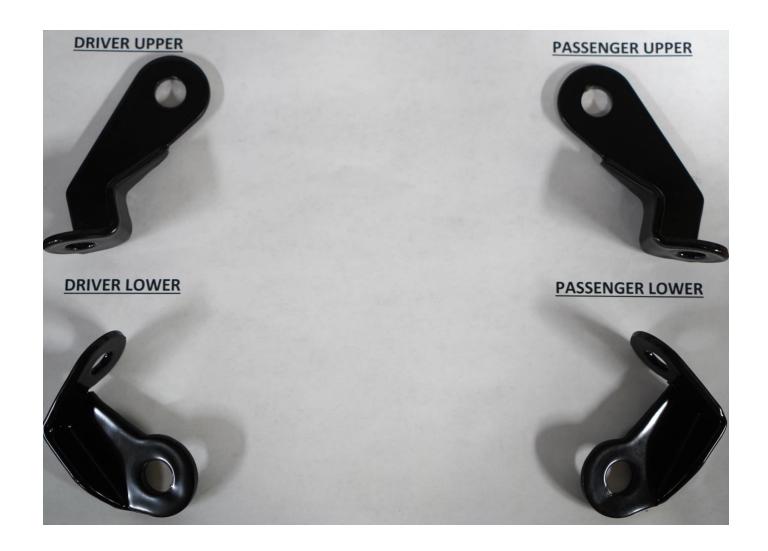

### **INSTALLATION INSTRUCTIONS**

# Honda Talon X – Rear Double Shear Brackets

Installation Instructions Page 2 of 5



### 2019+ Honda Talon X Rear Double Shear Brackets # S3199-64

#### **PARTS LIST**

ITEM	PART#	DESCRIPTION	QTY
	S3199-64	Driver Upper Bracket	1
	S3199-64	Driver Lower Bracket	1
	S3199-64	Passenger Upper Bracket	1
	S3199-64	Passenger Lower Bracket	1

#### INSTALLATION

- 1.) Place the Talon in park on a flat level surface.
- 2.) Elevate rear of Talon and support with suitable jack stands.
- 3.) Install each of the 4 Brackets one at a time. (Note: Refer to above picture for orientation.)
- 4.) Remove Driver Side Upper Radius Rod Nut, Washer, and Brake Caliper Bolt. Discard Washer. See Picture A and B.
- 5.) Install Driver Upper Bracket using OEM hardware. Hand tighten first, then final tighten. (Note: Brake Line routes over Driver Upper Bracket. See Picture C.) (Blue Threadlocker is recommended.)
- 6.) Remove Driver Side Lower Radius Rod Nut, Washer, and Brake Caliper Bolt. Discard Washer.
- 7.) Install Driver Lower Bracket using OEM hardware. Hand tighten first, then final tighten. (Note: Blue Threadlocker is recommended.) See Picture D, E, and F.
- 8.) Repeat process for opposite side.
- 9.) Reinstall wheels/tires. Test drive and recheck hardware after.
- 10.) Test drive vehicle and check all hardware.

Thank you for choosing S3 Power Sports! Let us know if you have any questions! 855-221-7097

Installation Instructions Page 3 of 5



# 2019+ Honda Talon X Rear Double Shear Brackets # S3199-64

#### **Picture A**



Picture B




Installation Instructions Page 4 of 5



# 2019+ Honda Talon X Rear Double Shear Brackets # S3199-64

#### **Picture C**

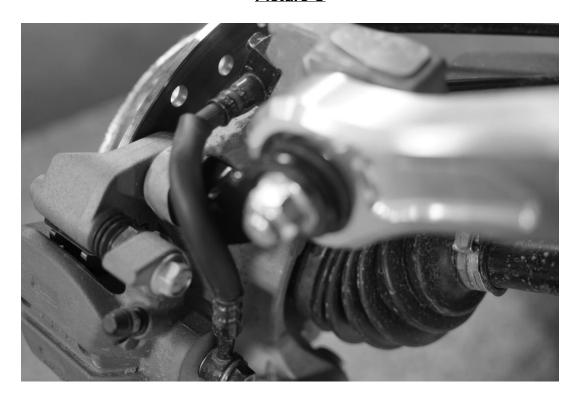

Picture D



Installation Instructions Page 5 of 5



# 2019+ Honda Talon X Rear Double Shear Brackets # S3199-64

#### Picture E



Picture F

