



2018-current RZR turbo/turboS exhaust cover

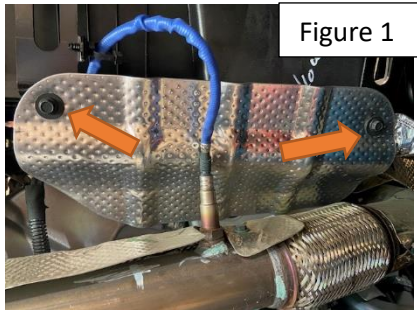


Figure 1

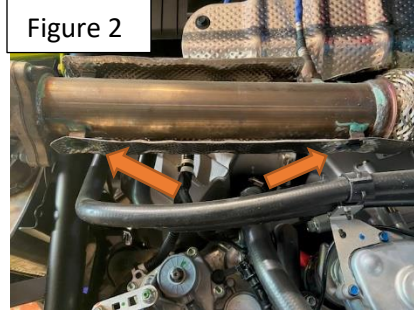



Figure 2

STEP 1:

Remove the 4 bolts shown in figures 1 and 2 using a 10mm wrench or socket.

STEP 2:

Leaving the factory heat shields in place, place the L&W cover over your exhaust and line up the (2) upper bolts. Go ahead and start the upper bolts using the factory bolts. Pay attention to the O2 sensor wire to make sure that it isn't going to be pinched behind the cover

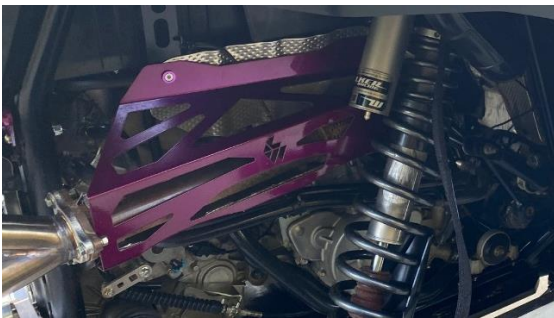

STEP 3:

Place the bottom 2 bolts supplied with your new cover through the cover and start the threads.

STEP 4:

Pull the bottom of the cover out away from the exhaust to keep from rattling and tighten the (2) lower bolts. After the lower bolts are tight, you can tighten the upper bolts.

THANK YOU FOR CHOOSING L&W FAB PRODUCTS!