



Made for first. Built to last.

DISCLAIMER:

PRODUCTS MADE BY L AND W FAB AND MACHINE INC. ARE INTENDED TO FIT YOUR STOCK UTV UNLESS OTHERWISE SPECIFIED. INSTALLING, MODIFYING, OR REMOVING ANY COMPONENTS (FACTORY OR AFTERMARKET) NOT SUPPORTED BY L AND W AND THE INSTRUCTIONS HEREIN WILL VOID YOUR WARRANTY. FOR MORE INFORMATION ON INSTALLATION, WARRANTY, OR PRODUCT USE PLEASE CALL US AT (770) 445-9778

## Polaris RZR PRO XP Front sport bumper


Fitment: 2019-CURRENT PRO XP



INSTALLATION MANUAL

# Parts List:

| Item # | Part # | Description            | Qty. |
|--------|--------|------------------------|------|
| 1      | N/A    | FRONT BUMPER           | 1    |
| 2      | N/A    | 5/16-18 X 1" BOLT      | 2    |
| 3      | N/A    | 5/16 SAE WASHER        | 4    |
| 4      | N/A    | 5/16 SPLIT LOCK WASHER | 2    |
| 5      | N/A    | 5/16 HEX NUT           | 2    |

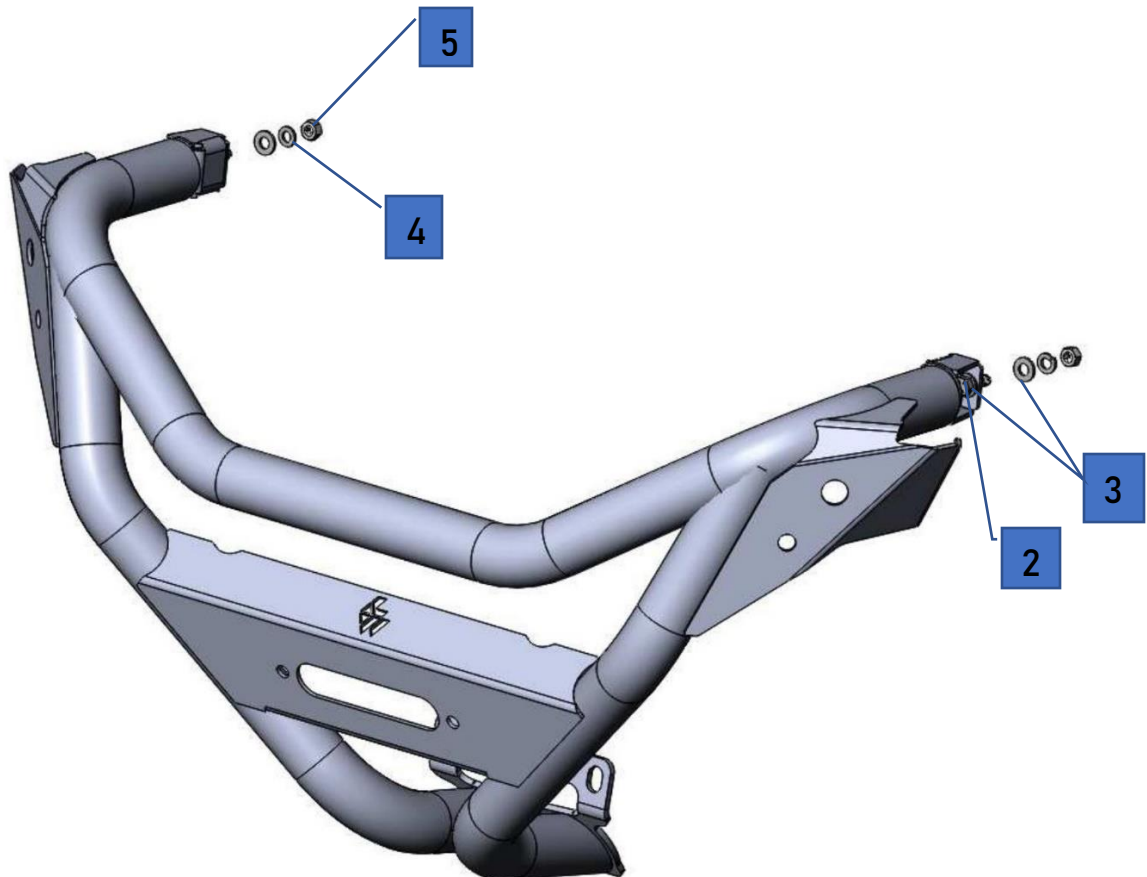

# Installation:

## STEP 1:

Remove the factory (or aftermarket if using winch) front plastic cover to access lower bolts.

## STEP 2:

Remove the 2 lower bolts on each side of the factory pull point. You will be reusing these bolts.



## STEP 3:

Place the bumper through the upper holes in plastics and let hang.





**STEP 4:**

Using the bolts removed in step 2, start the lower bolts but do not tighten.



**STEP 5:**

Install upper bolts. Use a flat washer on each side, followed by a split lock washer and nut. Once all bolts are started, continue to tighten all.





**THANK YOU FOR CHOOSING L&W FAB!**