

Honda Talon lower door install

TOOLS NEEDED FOR INSTALL:
Drill, .250 drill bit, clamp, 7/16
wrench, 3/16 allen wrench



REMOVE DOOR SKIN




USE CLAMP TO HOLD LOWER
DOOR TO DOOR



MAKE SURE LOWER DOOR IS
FLUSH WITH FRONT DOOR AND OUT
A LITTLE FOR REAR DOOR




DOUBLE CHECK FITMENT

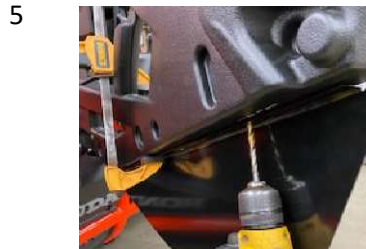

DRILL 1 HOLE .250 DIAMETER



INSTALL SUPPLIED BOLT, WASHER
ON PLASTIC SIDE

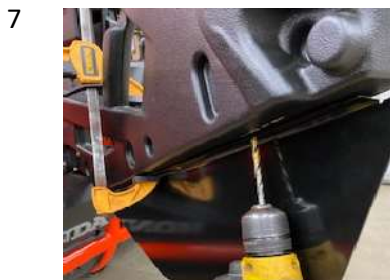

DRILL REMAINING HOLES AND
INSTALL BOLTS



CHECK FITMENT



REINSTALL DOOR SKIN

PLEASE GIVE @AJKOFFROAD A SHOUT OUT ON SOCIAL MEDIA AFTER INSTALL

PLEASE CONTACT AJK OFFROAD WITH ANY QUESTIONS AT : CONTACT@AJKOFFROAD.COM