

Estimated Install Time: 5-10 minutes.



Step 1: Remove the factory engine cover by lifting up on the latch as shown.






Step 2: Remove the factory ball style latch and replace with the provided push button latching mechanism. You will need to use a wrench on the underside of the latch to stop it from spinning. We recommend applying a small amount of Loctite to the threads when assembling the new latch.

(Image shown below with the provided latching bolt already installed)



Step 3: Test fit the cover by inserting the engine cove into the upper tabs. If the cover fails to latch, remove cover and adjust the height of the ball latching bolt and refit cover until it securely latches to the engine cover.

To remove the Agency Power Engine Cover push the button and lift up on the cover.

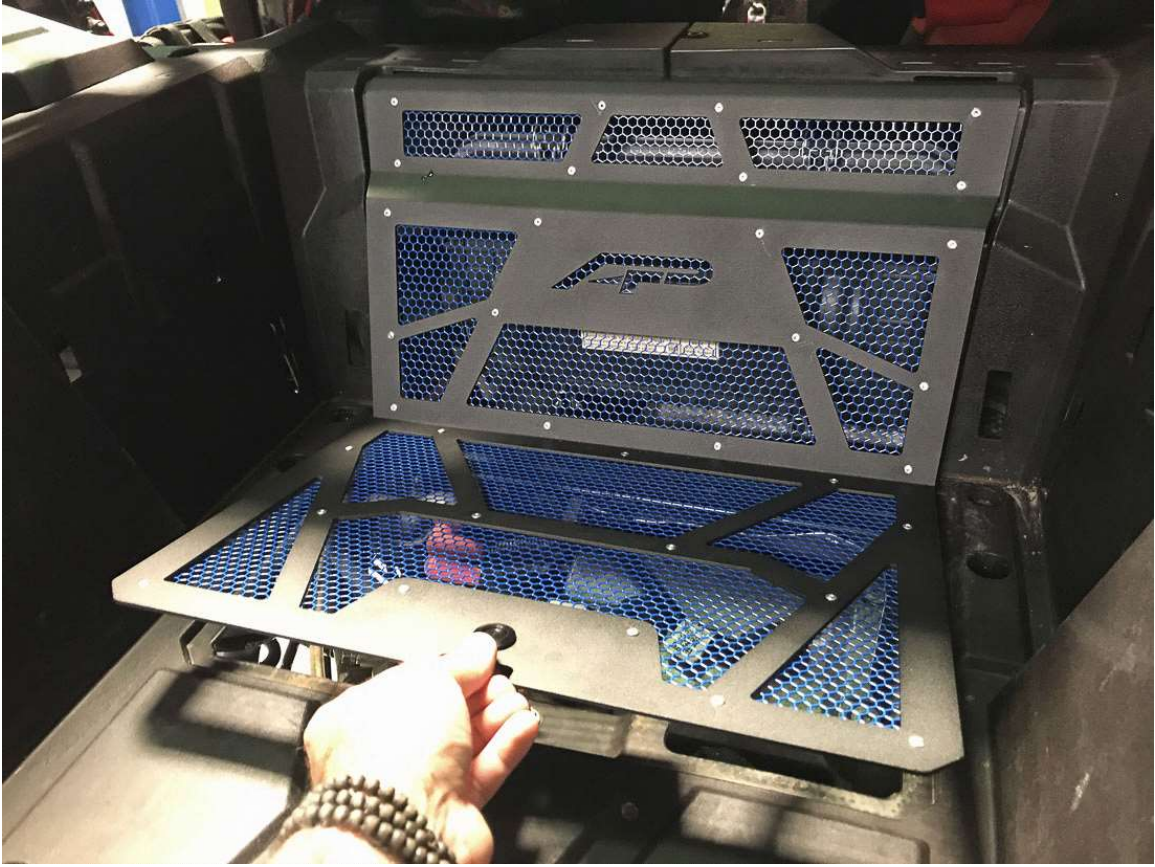



Enjoy your new Agency Power Vented Engine Cover!