



Made for first. Built to last.

DISCLAIMER:
PRODUCTS MADE BY L AND W FAB AND MACHINE INC. ARE INTENDED TO FIT YOUR STOCK UTV UNLESS OTHERWISE SPECIFIED. INSTALLING, MODIFYING, OR REMOVING ANY COMPONENTS (FACTORY OR AFTERMARKET) NOT SUPPORTED BY L AND W AND THE INSTRUCTIONS HEREIN WILL VOID YOUR WARRANTY. FOR MORE INFORMATION ON INSTALLATION, WARRANTY, OR PRODUCT USE PLEASE CALL US AT (770) 445-9778

PRO XP/ PRO R / TURBO R GRILL


Fitment: 2019-CURRENT PRO XP
2022 PRO R/ TURBO R



INSTALLATION MANUAL

Parts List:

Item #	Description	Qty.
1	GRILL FACE	1
2	GRILL MESH	2
3	LOGO BADGE	2
4	PRO SNAP TAB	2
5	10-24 X 3/8 BUTTON HEAD BOLT SS	21
6	10-24 THIN LOCKNUT	21

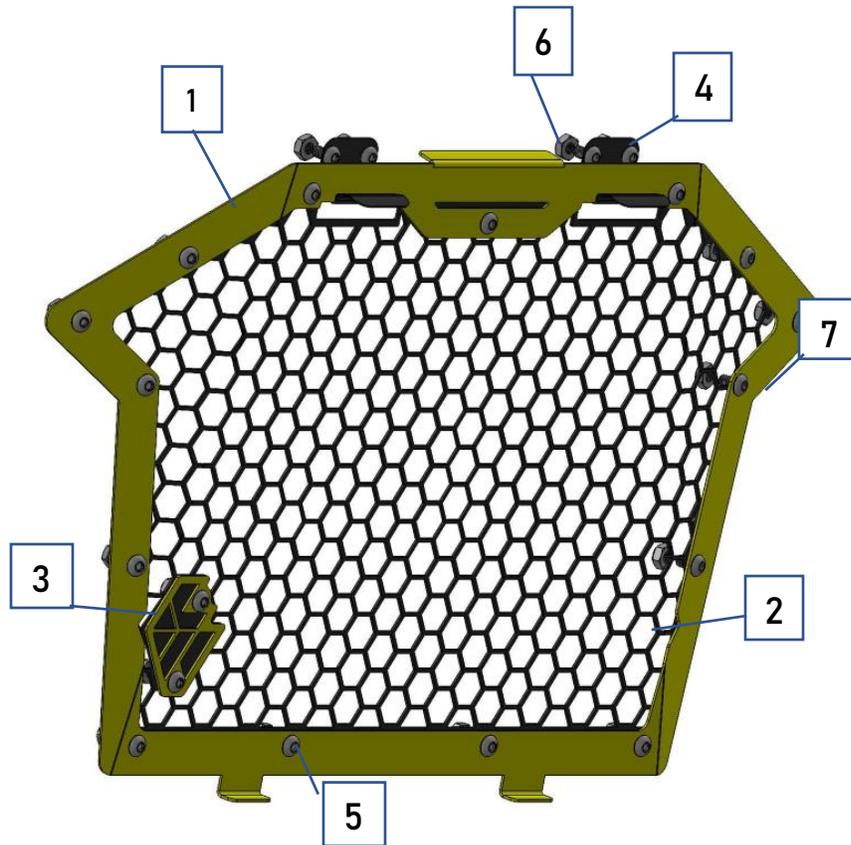

Installation:

STEP 1:

Bolt the grill mesh and logo badge to the grill face using the supplied hardware.


STEP 2:


Place the grill in place on the machine. The bent legs will lip underneath the plastic. You may need to use your hand from behind to make sure the center of the lower grill goes in front of the plastic lip as shown.



STEP 3:

Take one of the snap clips as shown and place through one of the 2 upper slots in the grill. Pay close attention to the pictures for the correct orientation. Using the snap tab, pull up on the grill so that you have tension holding up on the grill. Take a small drill bit, or marker and mark the holes to drill for the snap tab. Do the same for the other side.

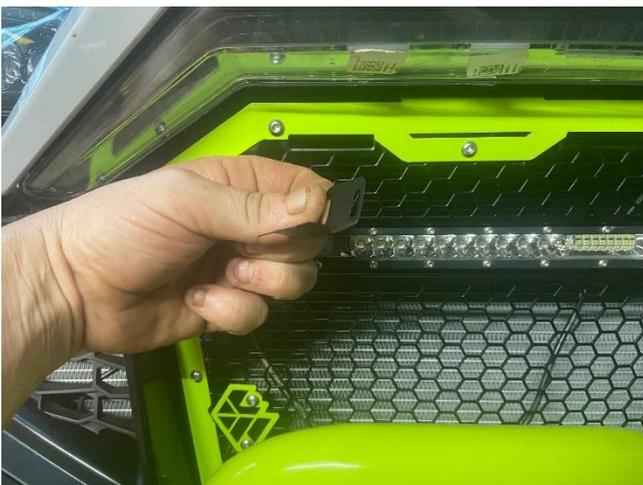

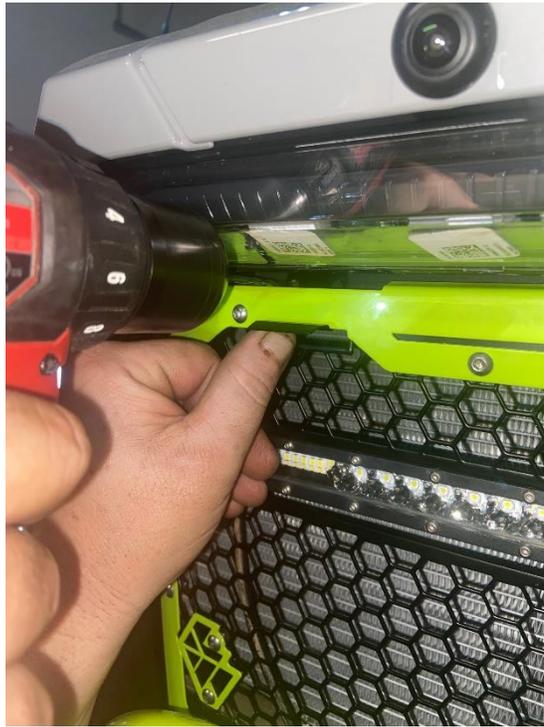

STEP 4:

Take the grill and set aside. Using a 7/32 drill bit, drill the 4 holes for the snap tab. After drilling, bolt the 2 snap tabs on the plastic.



STEP 5:

Place the grill back on the machine, and adjust the snaps until grill is secure and tighten the bolts. It may be necessary to trim about 1/2" of the small plastic lip on either side of the snap tabs to clear the bolts so that the grill will snap in far enough.

THANK YOU FOR CHOOSING L&W FAB!

