

AGENCY POWER CAN-AM X3 INTERIOR KIT INSTALLATION GUIDE



Estimated Install Time: 45 minutes for the whole kit

Tools Needed:

- Electric Drill With 5/32nd Drill Bit
- 3/8th ratchet
- HW4 Bit – 4mm Allen
- 13mm Wrench
- Scribe (5/32nd drill bit will work)
- PH1 Philips Screwdriver
- T-35 Torx Bit
- Long Flathead Screwdriver

Shift Knob Installation

Step 1: Loosen the shift knob jam nut by turning it right with the 13mm.



Step 2: Use the long flathead to loosen shift knob from the shifter.



Step 3: Thread the Agency Power shift knob on the shifter.



Step 4: Tighten the jam nut against the shift knob with the 13mm wrench.



Shift Gate Installation

Step 1: Place shift gate over the factory plate and hold shifter away from the gate.



Step 2: Use the scribe or drill bit to mark each hole.



Step 3: Drill the four holes for the mounting of the shift gate.



Step 4: Place the shift gate down and use the provided hardware to screw it in place.




Grab Handle Installation

Step 1: Use the T-35 bit to remove the top bolt of the grab handle.



Step 2: Twist and pull the factory grab handle.

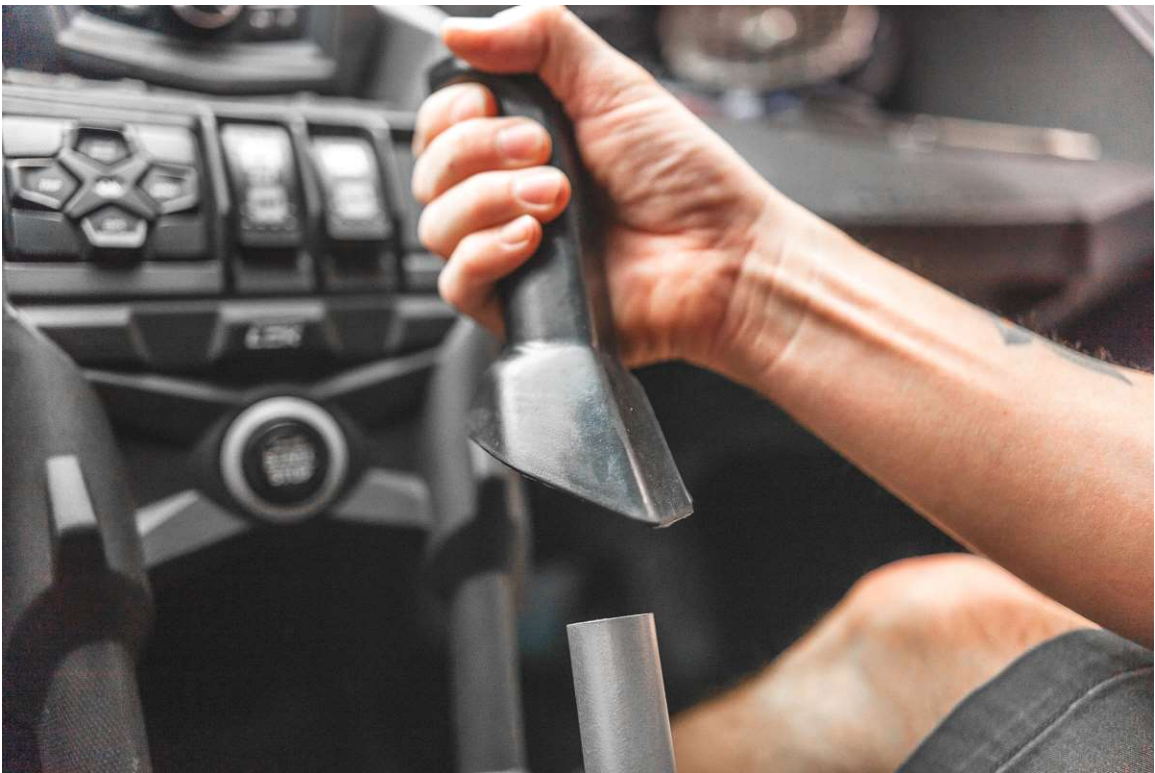

Step 3: Place rubber grommet on top of the factory grab bar.



Step 4: Slide the Agency Power grab handle over the tube and screw down with HW4 bit and provided hardware.





