

Thank you for choosing High Lifter!

FS-RZR1-01

POLARIS RZR 900/1000 - SUB-FRAME SUPPORT KIT

Lift Kits • Tires • Suspension • Snorkels

HIGHLIFTER

Axles • Clutch Kits • Portals • Rad Kits

Contact Us

Mon-Fri 8am - 5pm CST

highlifter.com

sales@highlifter.com

800-699-0947




READ BEFORE INSTALLATION

By purchasing and installing High Lifter products, user agrees that should damages occur, High Lifter will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. High Lifter will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from High Lifter. The total liability of seller to user for all damages, losses, & causes of action, shall not exceed the total purchase price paid for the product that gives rise to the claim.

DEALERS AND INSTALLERS

You are responsible for informing your customer and end user of the information contained above and the increased potential hazards of operating a side-by-side equipped with this component. All owners need to be informed that it is their responsibility to notify anyone operating the vehicle, as well as any passengers, that said vehicle is modified.

PARTS DIAGRAM

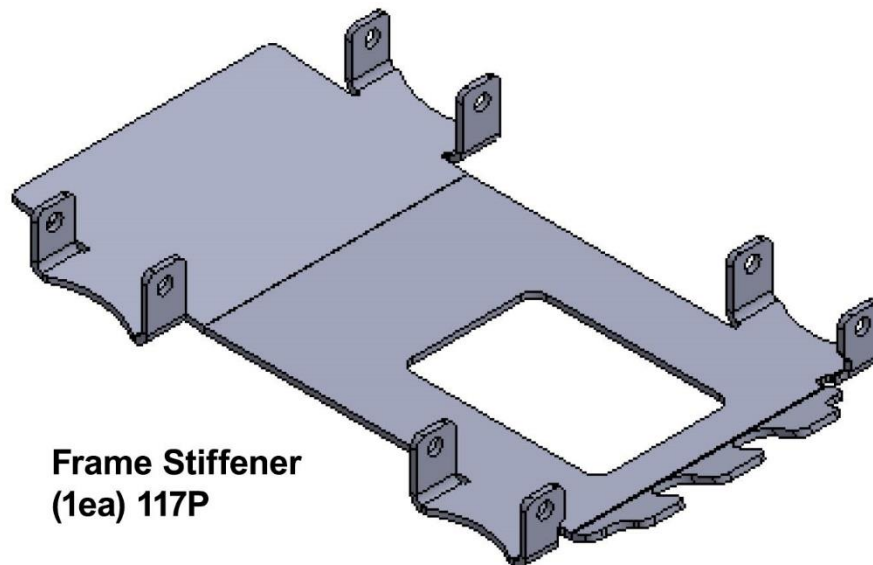

**Frame Stiffener
(1ea) 117P**



**10mmx110mm Hex Screw
(4ea) MCS10X110-10.9**



**6mmx25mm Hex Screw
(2ea) MCS625**



**10mm Lock Nut
(4ea) MLN10-1.5**



**10mm Flat Washer
(8ea) MFW10**



**1/4" x 1" Fender
Washer (2ea) FEN141**


Installation Instructions:

(PASSENGER SIDE)

1. For safety make sure that the unit is supported with jack stands or a jack before working under the unit and before removing the lower control arm bolts.

2. If your RZR has the standard skid plate, proceed to step # 3.

If you have a RZR 1000 rock crawler edition, you will first need to remove the front skid plate and the bumper guard. See pic →

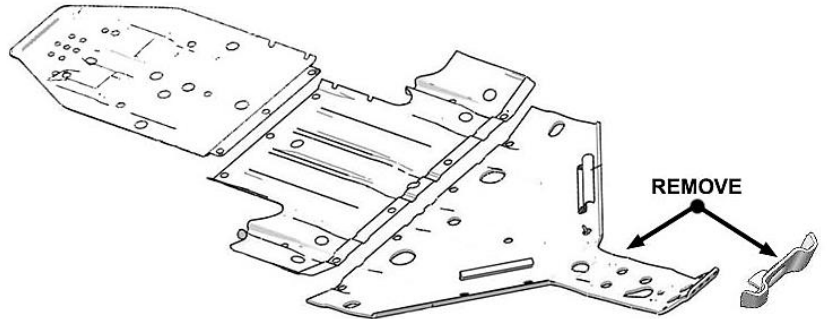


3. Remove the factory bolts connecting the lower control arms to the frame.




4. Place the frame stiffener plate **117P** to the frame and align the frame tab holes.



5. Replace the factory hardware with **10mmx110mm hex bolts**, **10mm flat washers**, and **10mm lock nuts**. Fasten hardware to factory specifications.

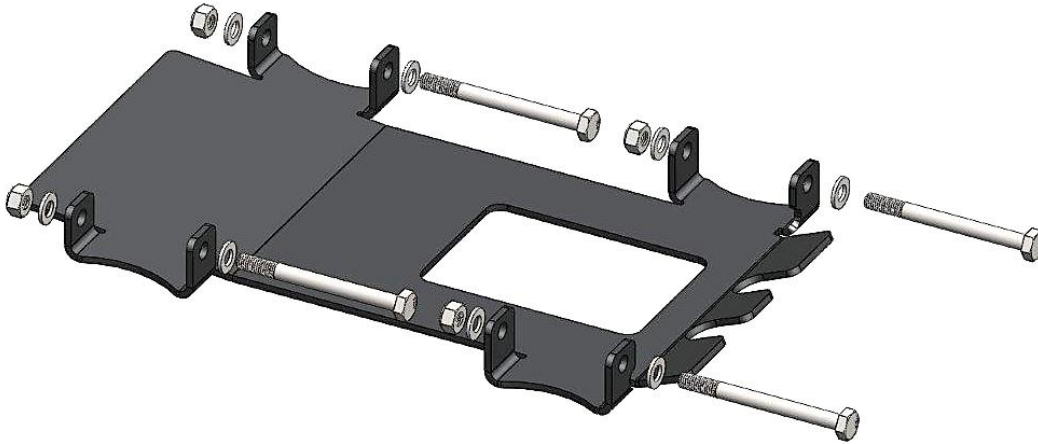

6. **If you have a rock crawler edition**, you can now LOOSELY reattach the skid plate back to the frame. This will help when securing it at the front in the next couple steps.
7. At the front, replace the factory 30mm hardware & washers with the supplied **6mmx25mm hex bolts** and **1/4" fender washers**. This will clearance the bolt from contacting the frame stiffener.

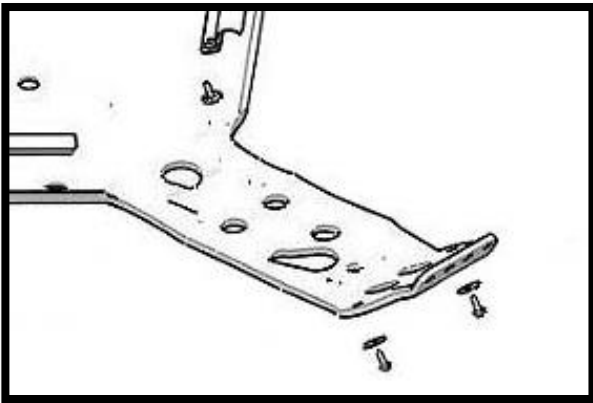

8. You can now use your factory washers from step # 6 and move them to the back side of the bumper guard. Then re-install it using factory hardware and fasten all skid plate screws.



Thank You
For Choosing
HIGHLIFTER



High Lifter Lifetime Warranty

From the beginning, High Lifter has engineered and manufactured some of the toughest, most durable products on the market. That is why this product comes with a Lifetime Warranty. It is our promise that High Lifter will never let you down.

- The **Lifetime Warranty** covers products sold to the original purchaser only and is not transferable. The term of the warranty is for the lifetime of the vehicle in question.
- Normal wear and tear items and finishes, such as, but not limited to Heim joints, tie rod ends, ball joints, bearings, seals, bushings, bushing sleeves, zinc plating, powder coating, or chipping and discoloration of any finish is not covered.
- High Lifter will ship the replacement product after the returned product has been inspected by High Lifter staff.
- The warranty shall not include claims for damages, installation time or labor charges, economic losses, inconvenience, transportation, towing, down time, direct or indirect or consequential damages or delay resulting from any defect.
- The warranty does not apply to products that have been improperly applied or improperly installed.
- **SPECIAL NOTE:** The warranty for this product will not cover improper installation of ball joints. Any claim relating to a ball joint issue will require inspection before eligibility for warranty can be determined. If the ball joint area shows damage due to improper installation such as, ridges, scarring, impact marks or other signs of improper installation, the warranty will be not be approved.

Making a warranty claim

1. All claims must be accompanied by the part and the original sales receipt or other acceptable proof of purchase from the original owner.
2. All warranties must be accompanied with a Return Merchandise Authorization (RMA) number. (Contact High Lifter at 318-524-2270 or 800-699-0947 for an RMA number)
3. When shipping the damaged product:
 - a. Write the RMA number on the outside of the box.
 - b. Also include the RMA number, proof of purchase and any notes inside the box.
 - c. Please keep your tracking number and shipment information.
4. The customer is responsible for shipping the product to High Lifter--return shipping within the lower 48 states will be paid by High Lifter products. With all warranty claims, only standard shipping services apply.
5. High Lifter will process your order within 24 business hours of receiving the returned item.
6. **Ship to:** High Lifter Products, 780 Professional Drive North, Shreveport, Louisiana 71105