


Lower RZR Door Bag Mounting Instructions

Please read instructions carefully before installation. We recommend this product be installed by a qualified, and experienced technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact us or your local dealer for help.

Below diagrams show typical installation, your vehicle may be different so please use diagrams as a guide. Make sure your vehicle is clean and free from dirt, road grime etc. where the this product mounts. It is the riders responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position, always check for proper mounting position after loading and before each and every ride.

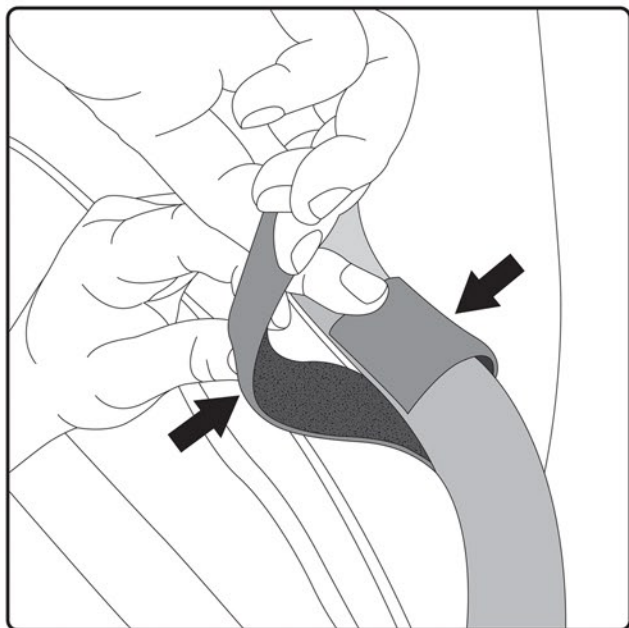

STOP: If using our upper door bag RG-001, you must install the lower bags BEFORE installing the upper bags.


1) Hold bag up to the bottom of the lower frame of the factory door. Pass the 2 upper straps around the door frame and connect the self-fastening straps. If using Polaris part number 2879509 or RZR4 #2879942 optional lower doors installed, see 1a below.

2) Before attaching the adhesive on the self fastening webbing on the back, surface must be free of grease, wax dust, dirt and silicone. To achieve a long-lasting bond, the surface must be thoroughly cleaned and prepared with rubbing alcohol or similar cleaning solution.

3) Unzip lower bag. Remove the adhesive strip on the back and with one hand inside the bags compartment, position and press firmly on the adhesive strip. Do not remove bag or detach self fastening webbing for at least 60 minutes allowing the adhesive to bond.

4) Double check for door clearance. Always position the lower bag so that the door closes freely and is in line with upper bag to your satisfaction.

When using, place the heavier item in the bottom of the bag. Be careful not to overstuff the bag or it may hit the seat and interfere with the door closing.

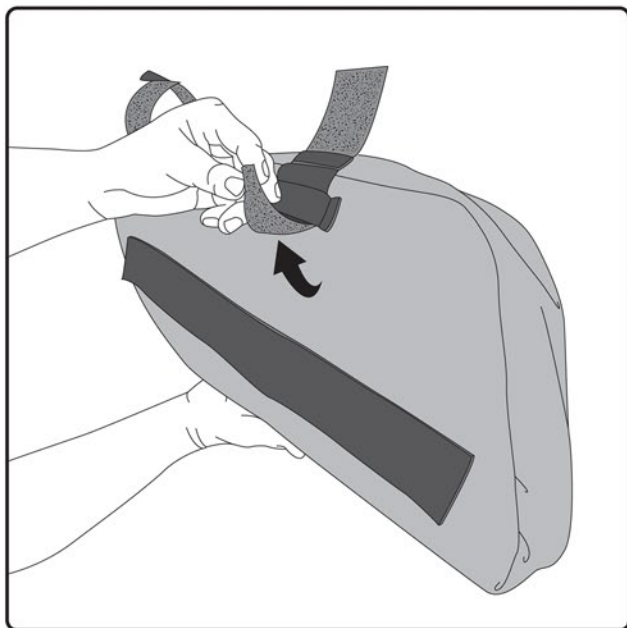

1a) If using Polaris part number 2879509 or RZR4 #2879942 optional lower doors installed pass the middle top strap on bag through the webbing loop on backside first. Then hold bag up to the bottom of the lower frame of the factory door. Pass the 2 upper straps around the door frame and connect the self-fastening straps.

Warning:

Read the installation instructions and make yourself familiar with the process of installing the Nelson-Rigg® product(s) on your bike. It is your responsibility to mount the product correctly and securely as outlined in these instructions. Nelson-Rigg® products are intended for use at USA street legal speeds as posted by the individual States. Nelson-Rigg® luggage must not be overloaded. Max carrying capacity is 10 lbs per bag or the maximum load suggested by the manufacturer of the vehicle, whichever is less.

Failure to adhere to these warnings may result in, but not be limited to: the luggage becoming detached, the product becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

Always ride safely, adhering to the local highway regulations. Always wear a helmet and protective apparel.

3518-A Lake Center Dr Santa Ana, CA 92704
Tel (714)850-1811 Fax (714)850-1848
e-mail: info@nelsonrigg.com www.nelsonrigg.com

