


Yamaha Wolverine X2

Plow Mount

PART #106145

Figure 1

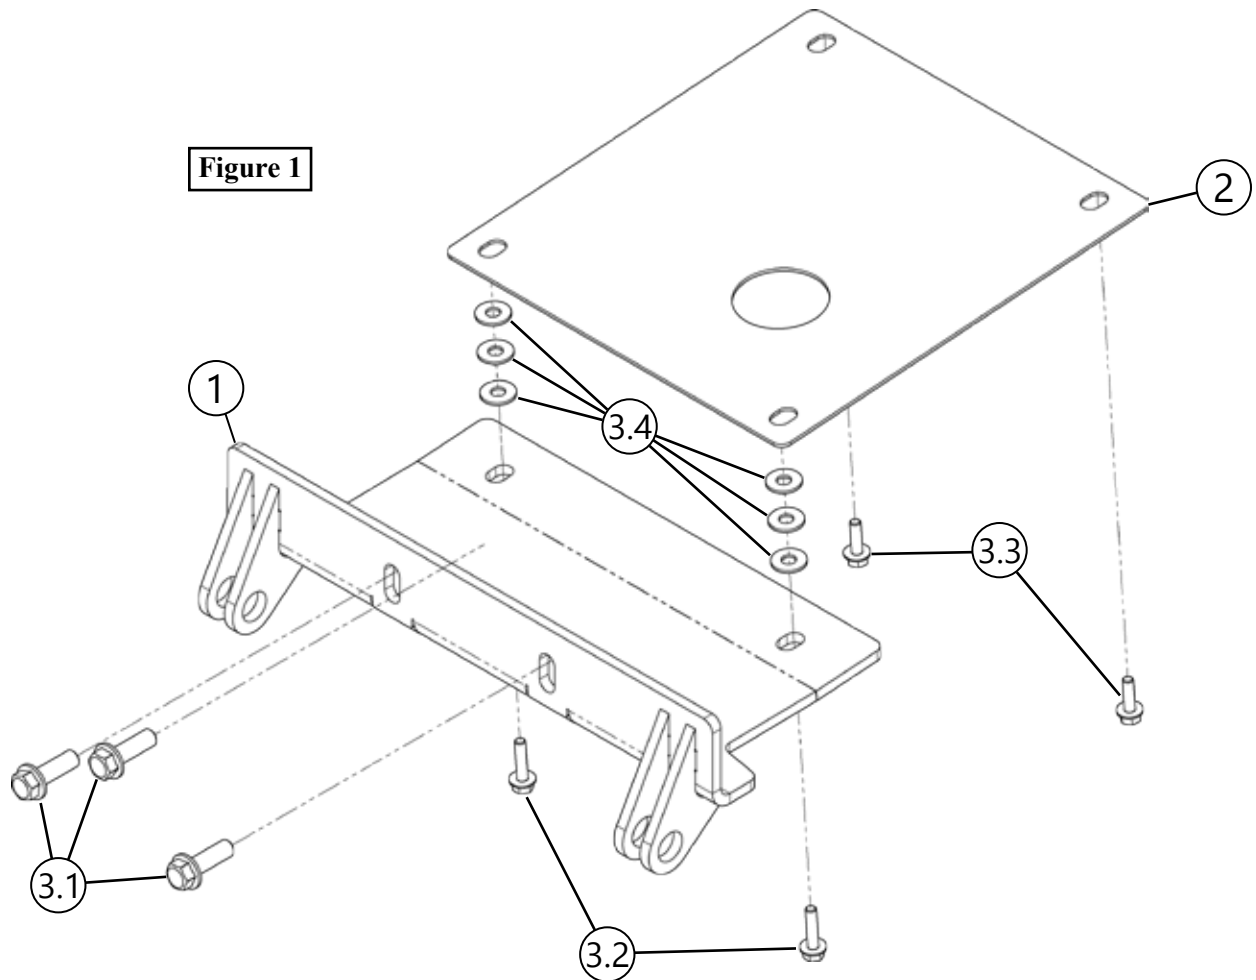

Kit Components:

Item #	Qty.	Description
1	1	Plow Mount
2	1	Skid Plate
3	1	Hardware Kit (HK-382)
3.1	3	M10 - 1.25 x 30 Hex Flange Bolt
3.2	2	M6 - 1.00 x 30 Hex Flange Bolt
3.3	2	M6 - 1.00 x 20 Hex Flange Bolt
3.4	6	1/4" Flat Washer



INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Remove OEM skid plate by removing bolts (A) as shown in **Figure 2**.
2. Remove bolts (B) from lower portion of front bumper shown in **Figure 3**.
3. Hold Skid Plate (2) in place lining up access hole with drain plug in front differential and secure rear of Skid Plate (2) using bolts (3.3) as shown in **Figure 4**.
4. Slide front of Plow Mount (1) between the front bumper and frame of the machine as shown in **Figure 5**.
5. Using washers (3.4) as a spacer, place 3 washers between Plow Mount (1) and Skid Plate (2) at the two rear mounting holes of Plow Mount (1) as shown in **Figure 1**.
6. Secure rear of Plow Mount (1) using bolts (3.2) as shown in **Figure 5**.
7. Secure front of Plow Mount (1) and lower portion of front bumper using bolts (3.1) as shown in **Figure 6**.
8. Tighten all hardware evenly.

