

Can-Am Outlander/Renegade

Plow Mount

PART # 105040

Hardware Kit: HK-107

Kit Components:

Qty.	Part Description
1.....	Plow Mount Plate
1.....	Right Mount Bracket
1.....	Left Mount Bracket
4.....	3/8-16 x1.00" Hex Cap Screw
4.....	3/8-16 Hex Flange Lock Nut

INSTALLATION INSTRUCTIONS:

1. Assemble mount plate to brackets (Figure 1). Angled bent tab (A) goes towards the front of the machine as shown in Figure 2.

Note:

Brackets may need to be left loose in order to get the mount plate to fit properly.

2. Remove outer nuts (B) from foot rests as shown in Figure 3. These will be reused to secure mount plate to ATV.
3. Place mount plate on machine and secure using the 4 nuts you just removed as shown in Figure 4 & 5.
4. Tighten down all nuts.
5. See ATV Plow Tube System instruction manual for tube attachment.

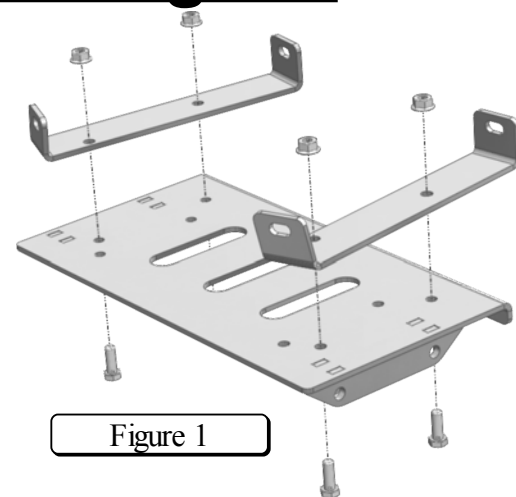


Figure 1

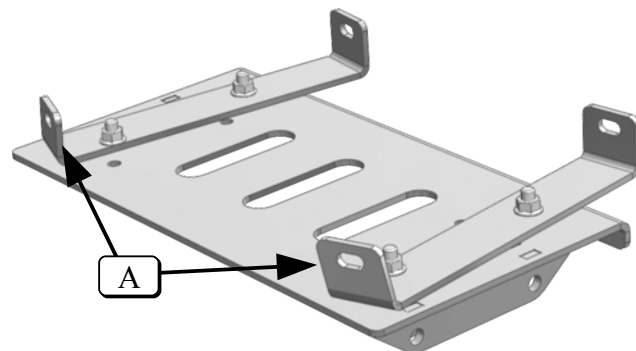


Figure 2

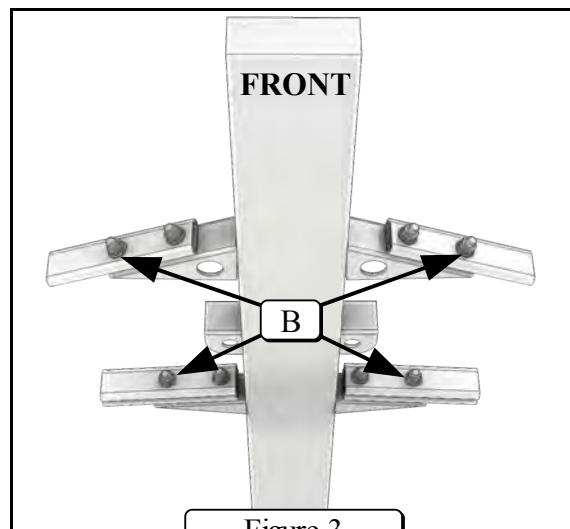


Figure 3

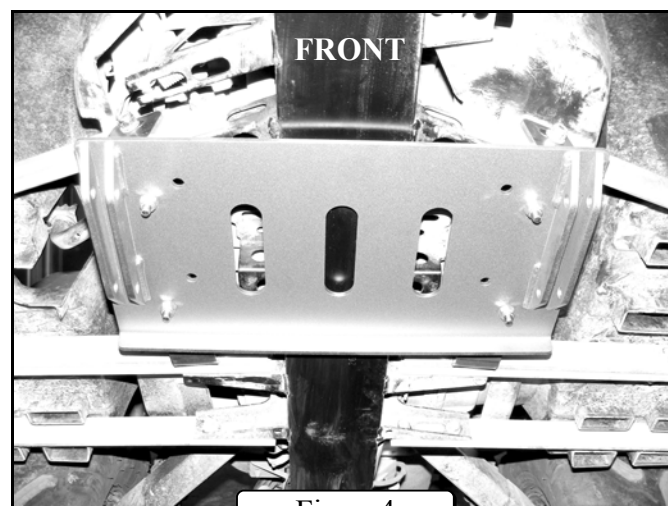


Figure 4

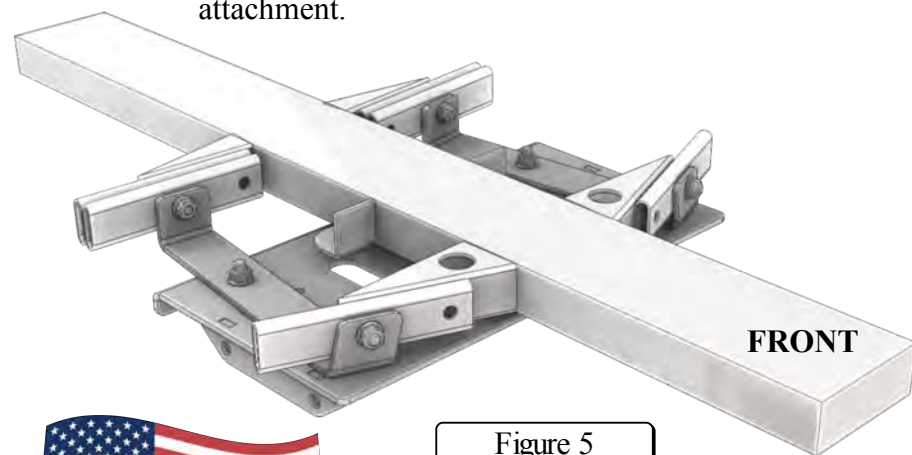


Figure 5

