



HIGHLANDS
— C A R G O —

Can-Am Maverick Trail / Sport Cargo Box
JC11141_Maverick

INSTALLATION INSTRUCTIONS

Parts Included


Part #	Qty.	Item
1	1	HIGHLANDS JC11141_Maverick Cargo Box
2	2	JC_Anchor_3



INSTALLATION INSTRUCTIONS

1. Open your new HIGHLANDS cargo box and locate the two drilled holes on the bottom of the box.
2. Unthread the two included anchors and put the threaded hand knob and washer inside the box through the drilled holes.

NOTE: The washer and hand knob sit on top of the white “washer” located inside the box. The remaining anchor pieces attach to the bolt underneath the hole. See photos for reference.

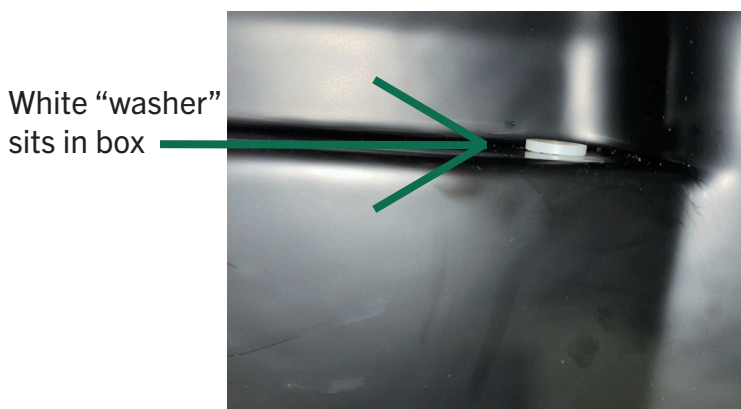

Hand knob and washer sit on top

White “washer” fits in between

Rest of anchor pieces sit under box

3. Loosely re-thread the rubber section to the hand knob on the bottom side of the cargo box.
4. Place the cargo box into the bed of your machine. It may take a few tries to carefully lower the box so the anchors enter into the lock and ride holes of your machine.
5. Once the box is fully seated in the bed, open the box and tighten the hand knobs until there is no movement of the box.