

# Yamaha Grizzly 550/660/700 & CF MOTO X SERIES

Plow Mount

PART # 105130

Hardware Kit # HK-121

## Kit Components:


Qty.	Part Description
1.....	Plow Mount Plate
4.....	5/16-18 x 1-3/8" x 2" U-Bolt
8.....	5/16-18 Hex Flange Lock Nut
2.....	1/4-20 Hex Flange Lock Nut
2.....	1/4-20 x 1" Hex Cap Screw
2.....	1/4" Flat Washer, SAE
2.....	1/4" Lock Washer

## INSTALLATION INSTRUCTIONS:


1. Remove 4 skid plate bolts (A) and 3 inner fender bolts (B) from middle skid plate. Remove the middle skid plate and only reinstall the 4 skid plate bolts that hold front and rear skid plates on the machine. Shown in [Figure 2](#).

*Note: On the CF Moto there is no inner fender bolts and there will be 2 zip ties in place of the bolts that will need to be removed.*


2. Place U-Bolts on the machine frame as shown in [Figures 1 & 3](#). Install mount plate loosely to frame using the u-bolts and 5/16" flanged lock nuts.
  3. Align the two angled tabs with front inner fender holes and loosely install 1/4" bolt, lock washer, washer, and flanged lock nut. Shown in [Figure 4](#).
- Note: Tabs will not be used on the 660 models or the CF Moto.*
4. Adjust plate so oil plug lines up with hole and plate is centered on machine.
  5. Tighten down all nuts and U-bolts evenly.
  6. See ATV Plow Tube System instruction manual for tube attachment.

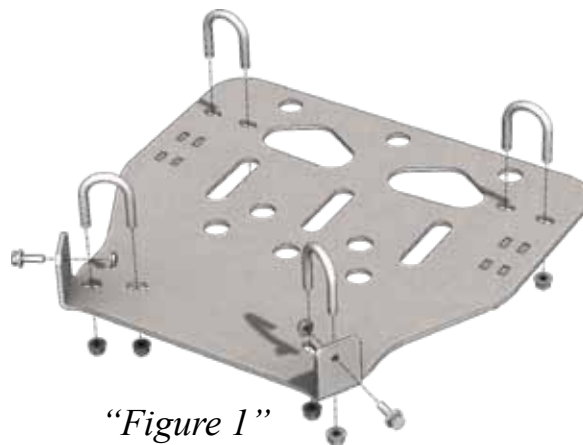


"Figure 1"

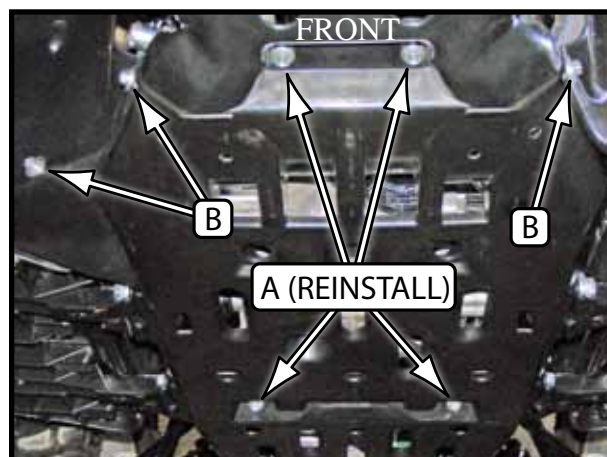


"Figure 2" Skid Plate Removal (Grizzly Shown)

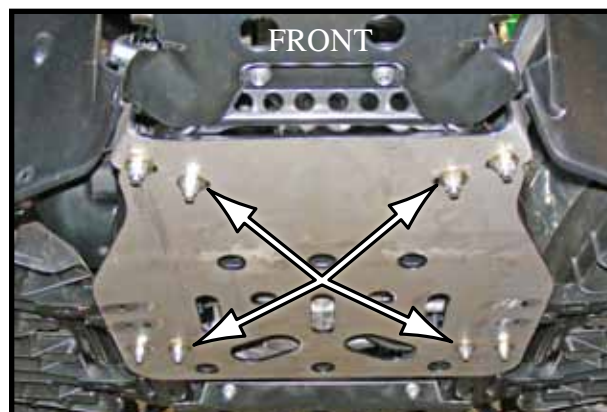

"Figure 3" Mount Plate Install

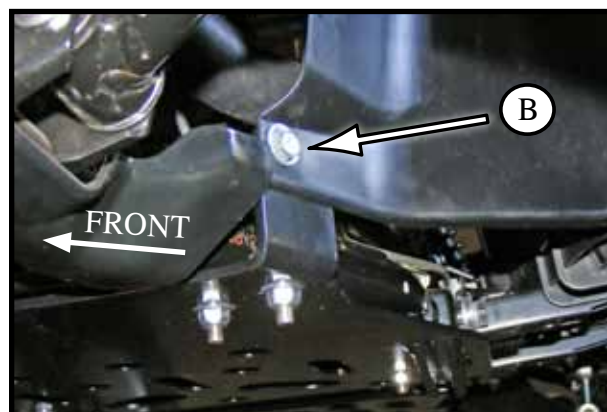

"Figure 4" Tab/Fender Install

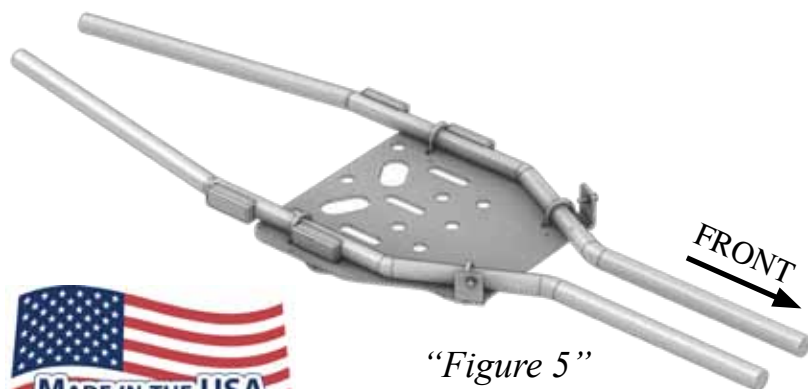

"Figure 5"

