

SPORTSMAN / SCRAMBLER 1000

Plow Mount

PART #106185

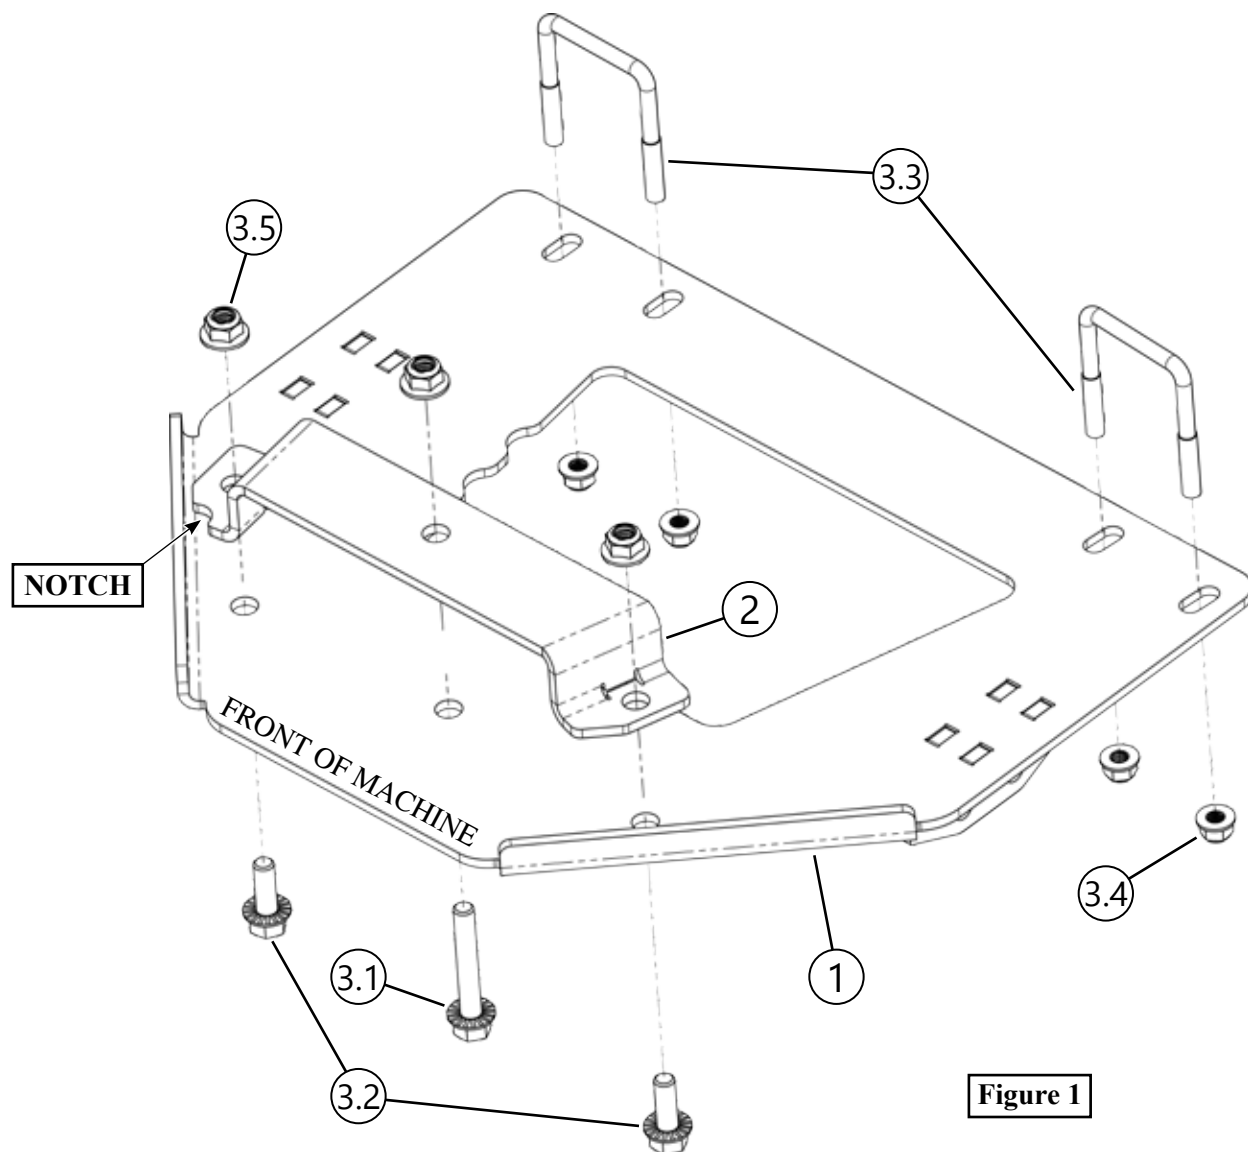


Figure 1

Item #	Qty.	Description
1	1	Plow Mount
2	1	Frame Bracket
3	4	Hardware Kit (HK-386)
3.1	1	3/8\"-16 x 2.25\" Hex Bolt Flange

Item #	Qty.	Description
3.2	2	3/8\"-16 x 1.00\" Hex Bolt Flange
3.3	2	5/16\"-18 x 2.00\" x 2.50\" SQ U-BOLT 1.25\" Thread
3.4	4	5/16\"-18 Hex Nut Flange Nylock
3.5	3	3/8\"-16 Hex Nut Flange Nylock



INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Remove the inner plastic fenders by taking out screws (A) and push pins (B) to allow for better access while installing. See **Figure 2**.
2. Place Frame Bracket (2) on top of the frame. The notch should be on the passenger side of the machine like shown in **Figures 1 and 3**.
3. Hold plow mount into place on the bottom of the frame and skid plate. Loosely install bolts (3.2 and 3.1) and nuts (3.5). The middle bolt (3.1) should go through hole in the frame like shown in figure **Figure 4**.
4. Center the Plow Mount (1) on the machine. The outside slots (A) on the rear of the plate should be outside of the frame. Using the inner slots (B) as a template, drill a hole through the plastic skid plate in each slot using a 3/8" drill bit. See **Figure 5**.

Note: Place drilled hole along slot in an area that avoids the steel gussets on the frame. The slots allow for greater adjustment when drilling the holes.

5. Install U-bolts (3.3) from the top by going around the frame, through plastic skid plate, and then the plow mount. Use nuts (3.4) to secure. See **Figure 6**.
6. Once all hardware is started, tighten all hardware evenly.
7. Resinstall inner plastic fenders. See **Figure 2**.

Figure 2

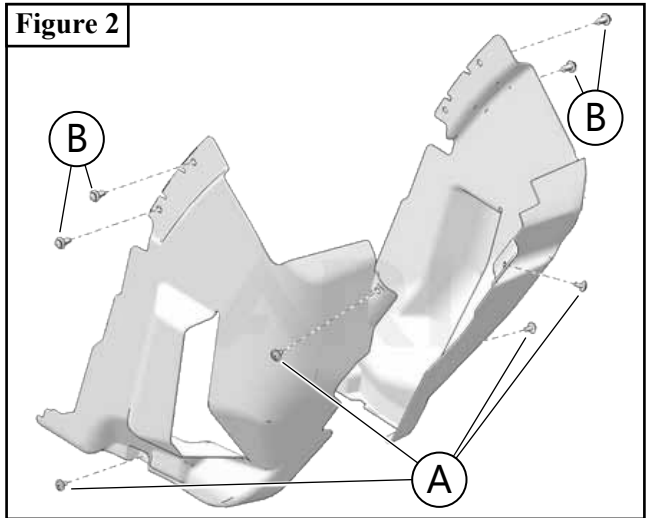


Figure 3

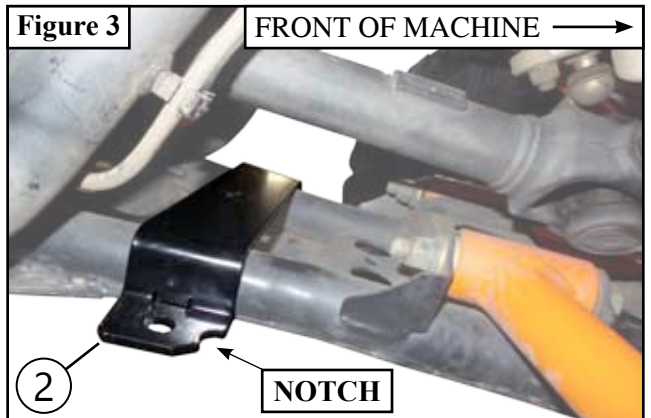


Figure 4

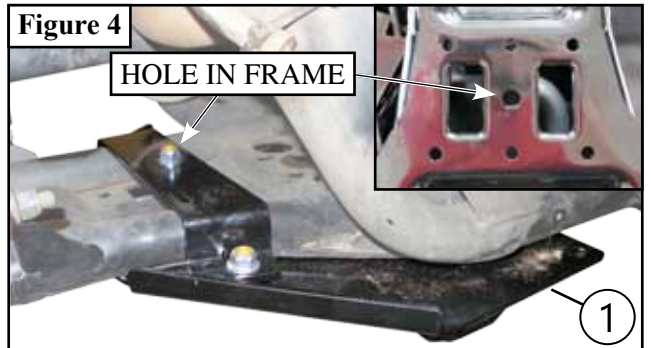


Figure 5

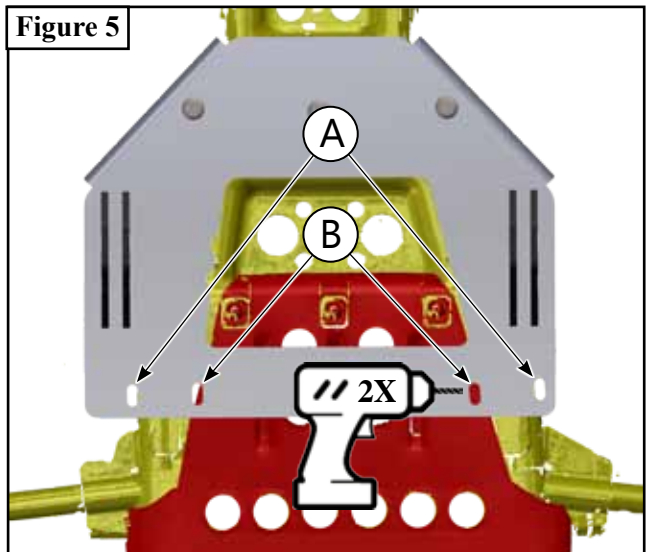


Figure 6

