

EMP P/N - 15029

2023-2024 Pioneer-6 (six seat version)

Hardware:

5/16-18 X 1-1/2 " Flange Bolt	(2)
5/16-18 Nyloc Nut	(2)
3/8-16 X 1" Carriage Bolt	(4)
3/8-16 Flanged Nyloc Nut	(4)
M6 X 16mm Hex Head Bolt	(2)
5/16 Flat Washer	(2)
EMP® Logo Decal	(1)

Tools Required:

Drill
1/4 " Drill Bit
Phillips Screwdriver
10mm Socket & Wrench
9/16" Socket & Wrench
3/8" Socket & Wrench
7/16" Socket & Wrench
1/2" Socket & Wrench

Preparation:

- 1) Remove three Phillips screws from side panels on inside of bed. Fig.1
- 2) Remove 10mm bolt holding D-ring on side panel. Fig. 2
- 3) Remove plastic body fastener from side panel.
- 4) Remove plastic side panel by opening rear door.
- 5) Remove the four bolts holding on the rear door and set door to the side. Fig.3
- 6) Remove two Phillips screws from the tail light.
- 7) Remove and unplug tail light and set to the side.
- 8) Remove the two remaining 10mm bolts from outer rear side panel and set to the side. Fig.4
- 9) Remove 10mm bolt from the pivot pin located at the bottom of the tailgate and discard this bolt. Fig.5
- 10) Repeat procedure for opposite side.

Mounting Rear Bumper Brackets:

- 1) Doing one side at a time carefully remove the pivot pin from the bottom of the tailgate and place the mounting bracket in position. Fig.6
- 2) Replace the pivot through the bracket and back into the tailgate.
- 3) Secure in place with the provided M6 X 16mm bolts. Fig.7
- 4) Using drill and 1/4 " drill bit drill hole through one side of frame tube and secure using supplied 5/16" bolt and 5/16 Nyloc nut. Fig.8

Mounting Rear Bumper :

- 1) Once brackets have been installed and tighten place rear bumper onto brackets and secure with the provide 3/8-16 X 1" Carriage Bolt & 3/8-16 Flanged Nyloc Nut.
- 2) Replace all panels and door by reversing the preparation procedure.
- 3) Enjoy your new bumper.



EXTREME
METAL PRODUCTS

www.ExtremeMetalProducts.com

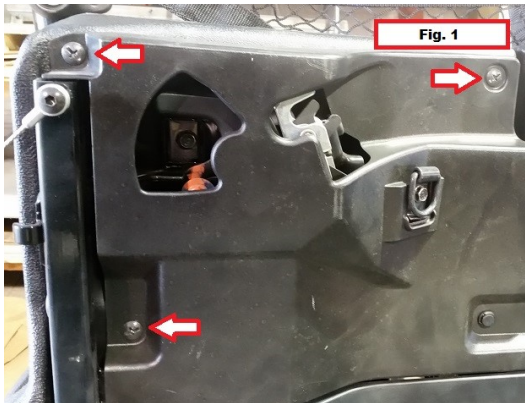


Fig. 1

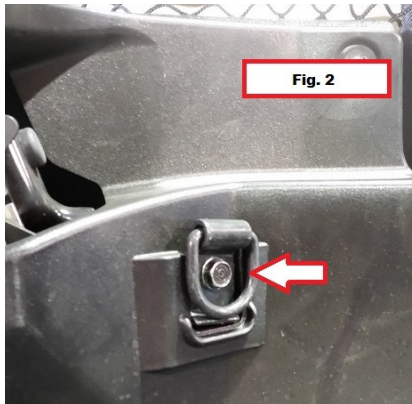


Fig. 2

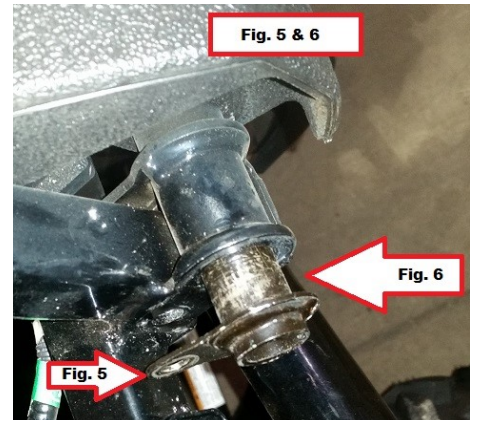


Fig. 5 & 6

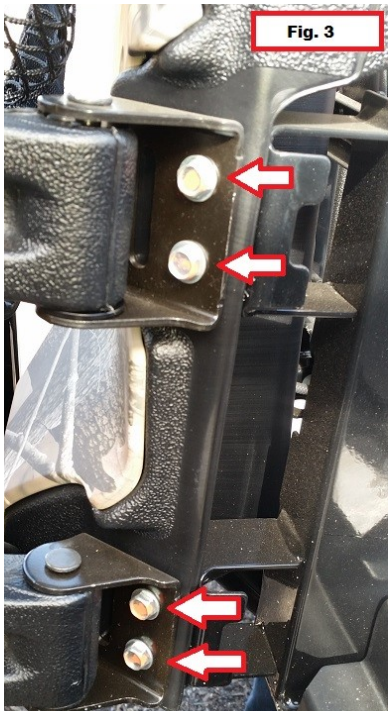


Fig. 3



Fig. 4

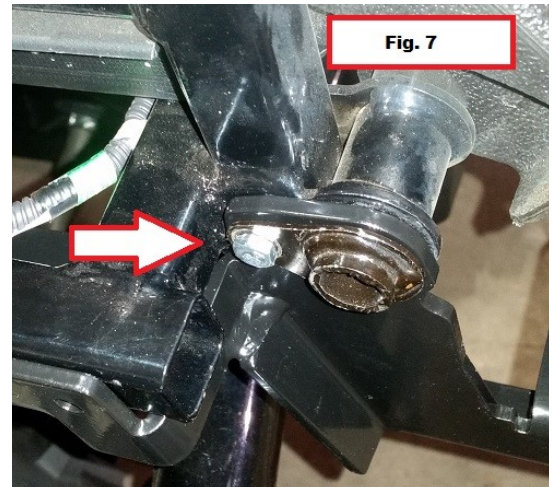


Fig. 7



Fig. 8




Fig. 9



EXTREME
METAL PRODUCTS

www.ExtremeMetalProducts.com

ITEM NO.	PART NUMBER	Std Configuration Name (Configuration Name)	DESCRIPTION	QTY.
1	15029-91	Default	Weldment bumper 59.5"	1
2	15029-01	Right hand side	Pioneer 1000-6 bumper mount	1
3	15029-01	Left hand side	Pioneer 1000-6 bumper mount	1
4	.375-16 x 1	.375-16 x 1	Grade 5 Steel Square-Neck Comage Bolt	4
5	.375 Flanged Nylock Nut	.375 Flanged Nylock Nut	Medium-Strength Steel Nylon-Insert Flange Locknut	4
6	M6-1x7 mm	M6-1x7 mm	Class 8.8 Steel Flanged Hex Head Screw	2
7	2 1/2 Flat Washer	2 1/2 Flat Washer	Zinc-Plated Steel Flat Washer	2
8	2 1/2-18 Nylock nut	2 1/2-18 Nylock nut	Medium-Strength Steel Nylon-Insert Locknut	2
9	2 1/2-18 x 1.5 Range Bolt	2 1/2-18 x 1.5 Range Bolt	Zinc-Plated Grade 5 Steel Flanged Hex Head Screw	2

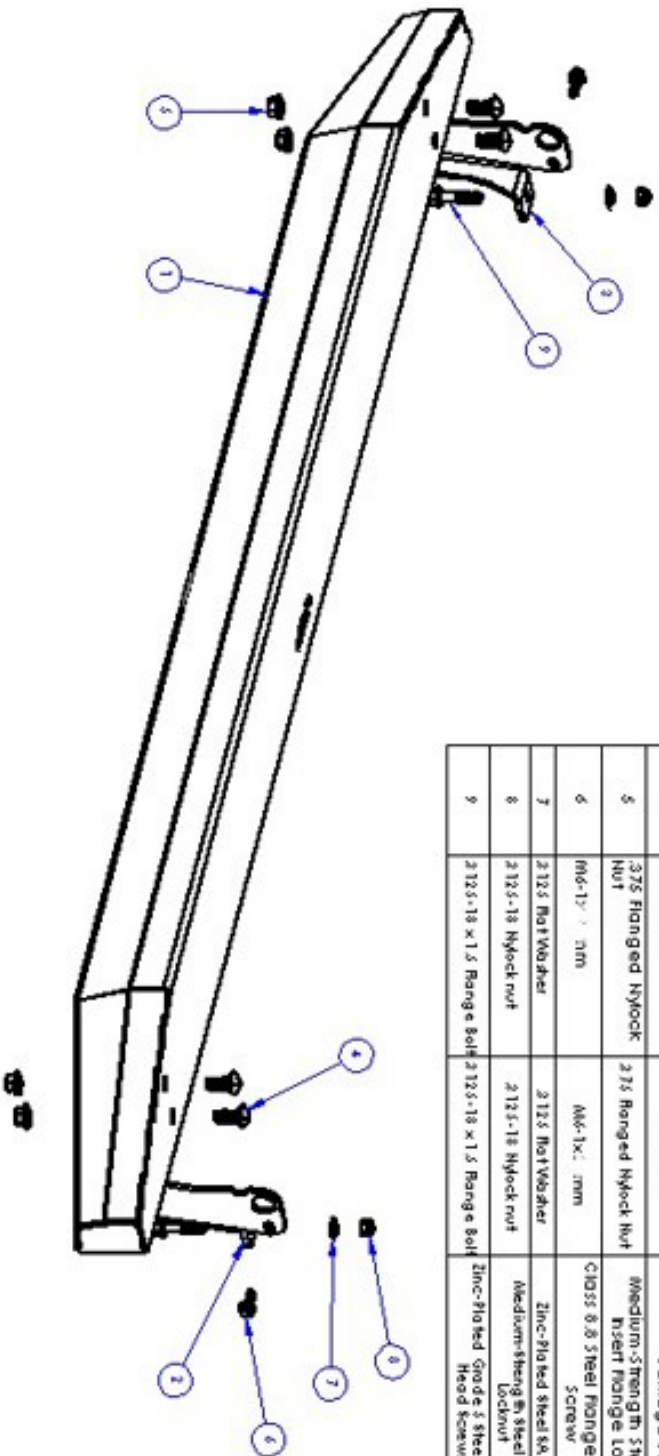

THIS BUMPERS ARE CONSIDERED
PROPERTY OF EXTREME METAL PRODUCTS, LLC
AND ARE NOT TO BE REPRODUCED, COPIED,
OR DISTRIBUTED WITHOUT THE WRITTEN
CONSENT OF EXTREME METAL PRODUCTS, LLC
EXTREME METAL PRODUCTS, LLC 2023/08/08

BRIEF ORDER FORM			
DATE ORDERED	DATE SHIPPED	DATE RECEIVED	DATE PAID
QUANTITY	PRICE	TOTAL	TAX
1	15029-91	15029-91	15029-91
1	15029-01	15029-01	15029-01
1	15029-01	15029-01	15029-01
1	.375-16 x 1	.375-16 x 1	.375-16 x 1
1	.375 Flanged Nylock Nut	.375 Flanged Nylock Nut	.375 Flanged Nylock Nut
1	M6-1x7 mm	M6-1x7 mm	M6-1x7 mm
1	2 1/2 Flat Washer	2 1/2 Flat Washer	2 1/2 Flat Washer
1	2 1/2-18 Nylock nut	2 1/2-18 Nylock nut	2 1/2-18 Nylock nut
1	2 1/2-18 x 1.5 Range Bolt	2 1/2-18 x 1.5 Range Bolt	2 1/2-18 x 1.5 Range Bolt
TOTAL: \$15029.90			
SCALE: 1/4" = 1"			