

Heretic

BEYOND LUMENS

24+ Maverick R 6 Inch Lower Grill Kit Install Guide



Heretic

1168 West 500 North Suite 500
Centerville UT, 84014
801-725-4824
Support@hereticstudio.com

Heretic

BEYOND LUMENS

IMPORTANT: Please read all instructions before beginning installation. These guidelines are provided in good faith to help prevent any issues arising from errors during installation. The manufacturer of this product shall not be held responsible for any user actions taken or not taken during installation. There are many details of the installation that are assumed to be general mechanical knowledge to experienced installers; which are not detailed in these instructions. These installation guidelines are intended to serve as professional recommendations and are not as a step-by-step, fail-safe installation checklist. Selection of an experienced installer is the sole responsibility of the project owner. Buyer is solely responsible for (and will indemnify and hold seller harmless for) any claims, losses, damages, fines, fees, costs, or other amounts arising out of Buyer's non-compliance with these installation instructions.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

Tools Needed for Install: Basic Tool Set

- 10mm, 7/16 In Socket / Wrench
- T30 Torx Screw Driver
- Wire Running Tool
- Crimp Tool
- Wire Cutters
- Tape / Zip Ties

Step 1: Locate the mounting bolts and mount the light bar.

The two T30 Torx mounting bolt are locate below the grill indicated with the arrows. Remove the two bolt and reinstall them with brackets, but leave the bolts loose.

Next, install the light bar into the brackets and loosely tighten the hardware.

Next, Route the pigtail behind the bar and through the cut below the grill toward the driver side.

Step 2: Install the wire harness.



Uninstall the cowl in the center of the dash and locate the OEM positive and negative posts. Loosely lay out the



harness there, but leave the harness disconnected.

Using a wire running tool, we suggest a very large zip tie, route the tool up from the bottom in the indicated area, and out through the top near the posts. Using electrical tape, tape the plug end to the wire running tool. Route the plug end of the harness through this opening and then to the light bar following existing wire harnesses and avoiding any hot, sharp, or moving parts.

Route the switch to desired location and secure the wire with zip ties along the way. Install the switch to the wiring as indicated on the harness install sheet.

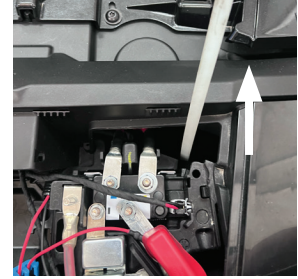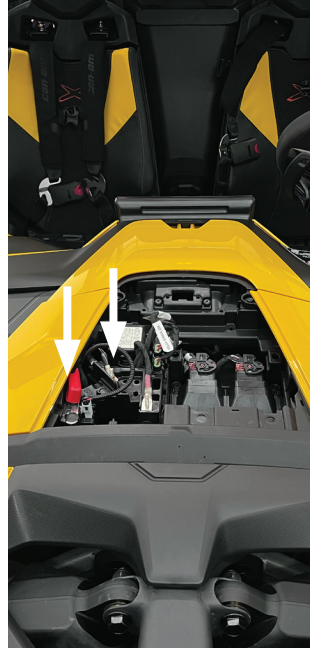

Step 3: With the wiring installed and the switch mounted, connect the harness to the OEM battery posts and check the functionality. With the light tested, and functional, secure any loose wiring, reinstall all the OEM trim pieces, and make any final adjustments to the angle of the light followed by tightening the hardware.

Your install is now complete! Thanks for choosing Heretic!



@hereticstudio

Heretic
BEYOND LUMENS