
## TA012ARMIMPFG-RZR1000-24

## Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

- A. Remove wheels and tires prior to beginning for easier installation. Always secure vehicle with safety stands.
- B. Locate Trail Armor's Driver side iMpact a-arm guard (XP1K-DF-24). Hold a-arm guard in place. Insert (2) supplied 1/4 - 20 x 1 3/4" flat head socket screws (100131) up through the two outer holes of the guard into the pre-drilled holes in the a-arm cross brace. Start (2) supplied 1/4 - 20 nylock nuts (100037) on installed screw ends. See Picture 1 and 2 circled in red.



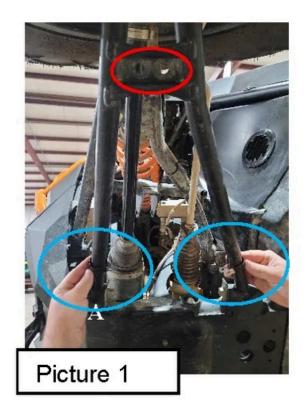

- C. Locate (2) 1" P-clamps (100268) and install them per (Picture 1 circled in blue). Insert (2) supplied 1/4 - 20 x 1 1/4" flat head socket screws (101036) up through the other (2) holes of the guard. Start (2) supplied 1/4 - 20 nylock nuts (100037) on installed screw ends. (Picture 2 circled in blue). Once aligned tighten all fasteners.
- D. Repeat steps B and C for the opposite side. See Pictures 3 and 4 for Final Install.

