




TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions



Installation Instructions for Trail Armor Yamaha Wolverine RMAX4 Full Skids TA012FULLSKID-YW-RMAX4

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.




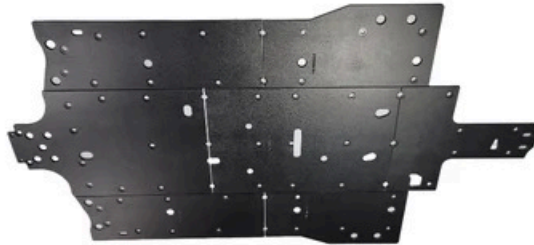


- A. To ease installation, gently tip the machine onto its side and support securely with a safety stand.

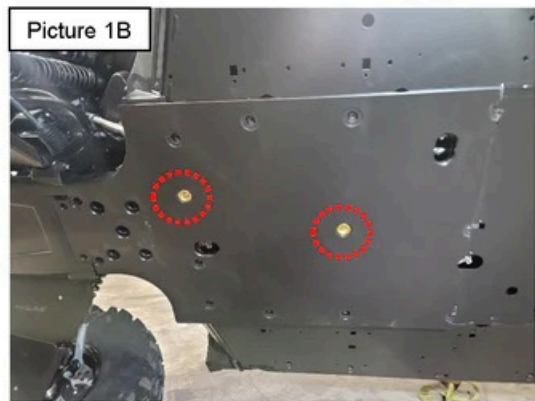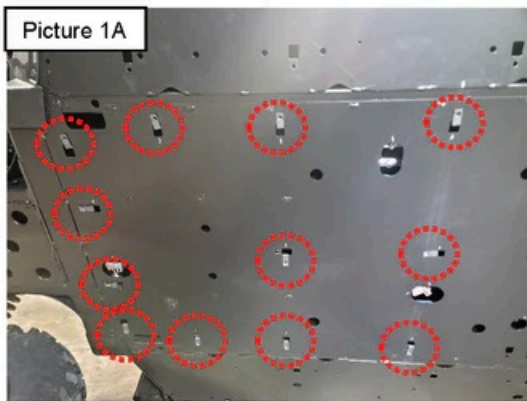


- B. Locate and install (12) supplied $\frac{1}{4}$ -20 u-nuts (100110). Insert these as shown in Picture 1A.
- C. Locate Panel A and install with (2) $\frac{1}{4}$ -20 x $\frac{3}{4}$ " thread cutting screws (100108) and (2) supplied bowl washers (100087). (Picture 1B) Loosely tighten.
- D. Locate and install (12) supplied $\frac{1}{4}$ -20 u-nuts (100110). Insert these as shown in Picture 2A.

- E. Locate Panel B and install with (2) ¼-20 x ¾" thread cutting screws (100108) and (2) supplied bowl washers (100087) align with Panel A. (Picture 2B) Loosely tighten.
- F. Locate and install (6) supplied ¼-20 u-nuts (100110). Insert these as shown in Picture 3A.
- G. Locate Panel C and install with (2) ¼-20 x ¾" thread cutting screws (100108) and (2) supplied bowl washers (100087) align with Panel B. (Picture 3B) Loosely tighten.

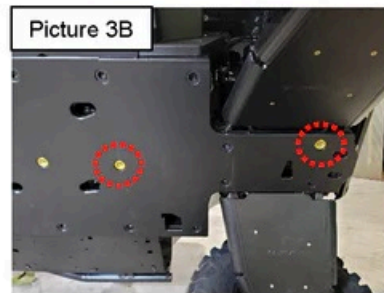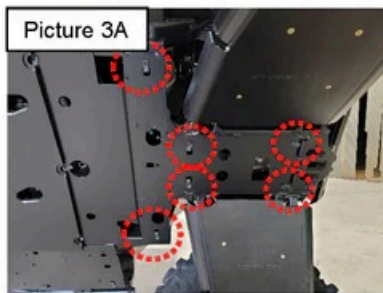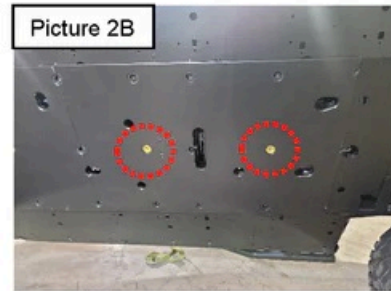
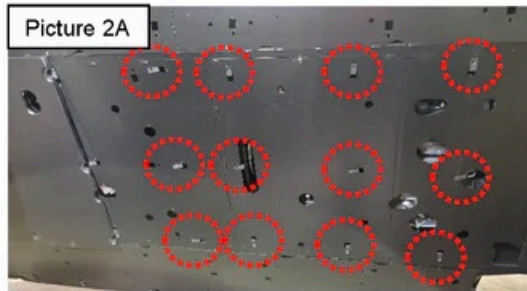


- H. Align the center panels and tighten hardware. Install (24) ¼-20 x ¾" thread cutting screws (100108) and (24) supplied bowl washers (100087) shown in Picture 4.


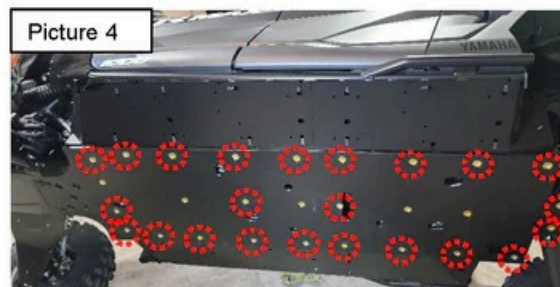


- I. Locate and install (13) supplied ¼-20 u-nuts (100110). Insert these as shown in Picture 5A.
- J. Locate Panel D and install with (2) ¼-20 x ¾" thread cutting screws (100108) and (2) supplied bowl washers (100087) align with Panel A. (Picture 5B) Loosely tighten.
- K. Locate Panel E and install with (2) ¼-20 x ¾" thread cutting screws (100108) and (2) supplied bowl washers (100087) align with Panel D. (Picture 5C) Loosely tighten.

- L. Once slider panels are aligned tighten hardware. Install (9) $\frac{1}{4}$ -20 x $\frac{3}{4}$ " thread cutting screws (100108) and (9) supplied bowl washers (100087) shown in Picture 6.
- M. Repeat steps I through L for the opposite side.

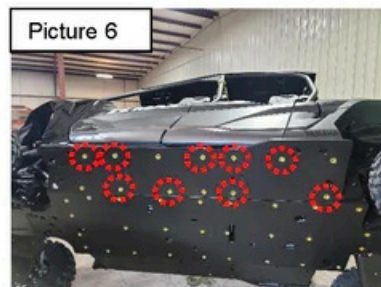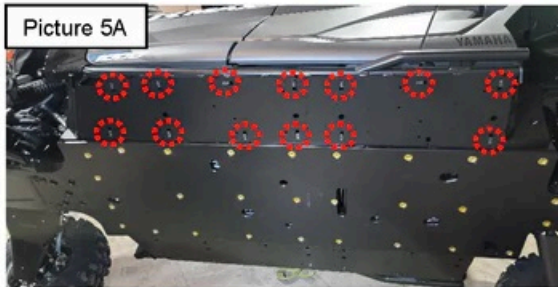

- N. Locate and install (2) M6-1.0 x 30mm flange bolts (100516) and (2) supplied bowl washers (100087) into the remaining holes in panel A. (Picture 7)
- O. Locate and install (4) #14 x 1" TEK self-drilling screws (100054) and (4) supplied bowl washers (100087) into the remaining holes in the slider panels. (Picture 8)

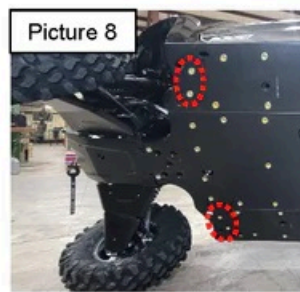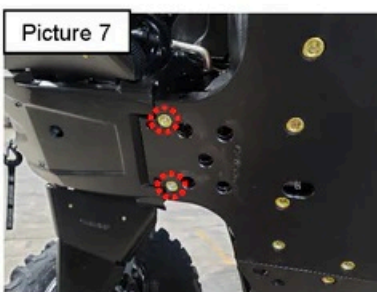

P. See Picture 9 for Final Install.

