




TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Trail Armor RZR 1000 XP Mud Flap Fender Extensions TAMFFE-RZR1K-24

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. All Trail Armor products are designed, engineered, and fit to new vehicles and their specifications. Damage, modifications, and extreme wear may cause and require modifications to the product and/or your vehicle to insure proper fitment.

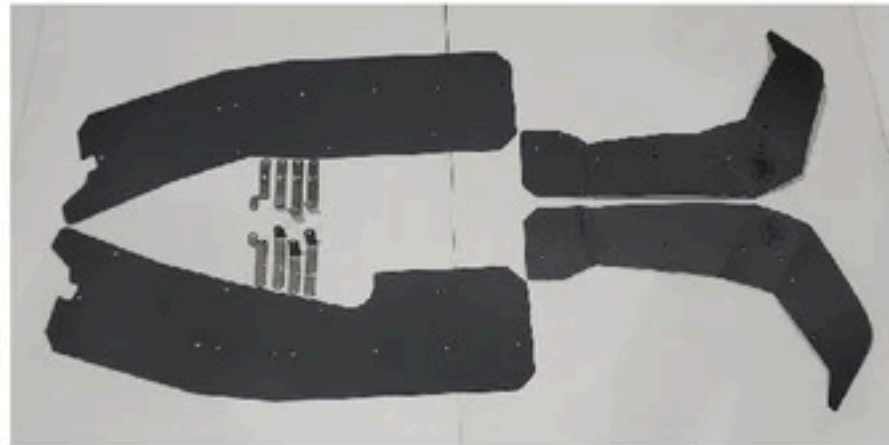

Instructions

FRONTS





TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

- A. Starting with the Passenger Side front, remove the OEM screw shown in Picture 1A. Locate the Passenger Side Front Fender Extension and install with the removed OEM screw. See Picture 1B.
- B. Holding the Fender Extension firmly against the OEM fender you will need to get a drill and a 5/16 drill bit and drill a hole (shown in Picture 2). Locate (1) Push Pin (100218) and install in the previously drilled hole.
- C. Moving to the bottom hole hold Fender Extension firmly against the OEM fender and drill another hole. Locate (1) Push Pin and install in the previously drilled hole. See Picture 3.



- D. Continue moving up the Fender Extension holding it firmly against the OEM fender drilling a hole and inserting a Push Pin (100218) in the remaining (6) holes. See Picture 4.
- E. Locate (1) #10 x 3/4" Phillip head screw (100075) and (1) Rectangle Speed Nut (100071). Insert in the front hole in Fender Extension. Making sure the inner edge of the Fender Extension is aligned with the inner edge of the OEM fender flare. (See Picture 5).





TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

- F. Repeat Steps A through E for the Driver Side.

REARS

- G. Remove the OEM screw shown in Picture 6A. Locate P4 metal bracket and install using the removed OEM screw. Locate (1) ¼-20 U-nut (100110) and install on the end of P4. See Picture 6B.
- H. Moving up the OEM fender remove the next OEM screw. Locate P3 metal bracket and install using the removed OEM screw. Locate (1) ¼-20 U-nut (100110) and install on the end of P3. See Picture 7.
- I. Moving up the OEM Fender remove the next OEM screw. Locate P2 metal bracket and install using the removed OEM screw. Locate (1) ¼-20 U-nut (100110) and install on the end of P2. See Picture 8.
- J. Moving to the rear of the OEM Fender remove the OEM screw. Locate P1 metal bracket and install using the removed OEM screw. Locate (2) ¼-20 U-nuts(100110) and install on each end of P2. See Picture 9.





TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions



Picture 8



Picture 9

- K. Locate (1) $\frac{1}{4}$ -20x $\frac{5}{8}$ " Torx Truss screw (**100023**) and insert in the Fender Extension into the installed U-nut shown in Picture 10.
- L. Locate (1) $\frac{1}{4}$ -20x1" Torx Truss screw (**100022**) and insert in the Fender Extension into the installed U-nut. You may need to move the Fender Extension around to get lined up with the U-nut. See Picture 11.
- M. Locate (3) $\frac{1}{4}$ -20x1" Trox Truss screw (**100022**). Moving down the Fender Extension insert the screws into the U-nuts in the locations shown in Picture 12.



Picture 10



Picture 11



Picture 12

- N. Firmly push the Fender Extension up against the OEM fender making sure Fender Extension is following the contours of the OEM fender. Mark and drill a $\frac{5}{16}$ " hole and install (1) Push Pin (**100218**) in the location shown in Picture 13.
- O. Continuing to hold Fender Extension firmly against the OEM Fender mark and drill two more $\frac{5}{16}$ " holes and install (2) Push Pins (**100218**) in the location shown in Picture 14.



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions



Picture 13



Picture 14

- P. Moving up to the next two predrilled holes in the Fender Extension hold firmly in the bend of the OEM fender and mark and drill two 5/16" holes into the OEM fender and install (2) Push Pins (100218). See Picture 15.
- Q. Moving up to the next two predrilled holes in the Fender Extension hold firmly in the bend of the OEM fender and mark and drill two 5/16" holes into the OEM fender and install (2) Push Pins (100218). See Picture 16.



Picture 15



Picture 16

- R. Repeat Steps G through Q for the Driver Side.



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions



Final Install

