



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Installation Instructions for Trail Armor Can am Maverick R Full Skids TA012FULLSKID-CAM-R

Warnings and Product Liability Disclaimer





This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.





- A. To ease installation, gently tip the vehicle onto its side and support securely with a safety stand.
- B. Remove all Factory skids see Picture 1 and 2.
- C. Reinstall the removed OEM rocker panels with the OEM hardware. Use (4) ¼-20x 1-1/4 TEK screws (100148) and install in the holes where the Pop rivets were removed. Repeat for opposite side. Picture 3.



- D. Locate Panel C. Install with (4) ¼-20x1-1/4" TEK screws (**100148**) and (4) Bowl washers (**100087**). (Picture 4).
- E. Locate Panel B. Install with (2) ¼-20x1-1/4" TEK screws (**100148**) and (2) Bowl washers (**100087**). (Picture 5).
- F. Locate Panel A. Install with (1) ¼-20x1-1/4" TEK screw (**100148**) and (1) Bowl washer (**100087**). (Picture 6).

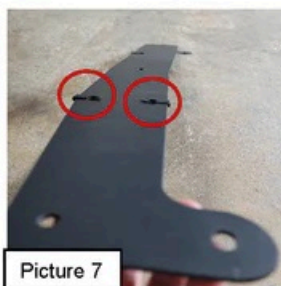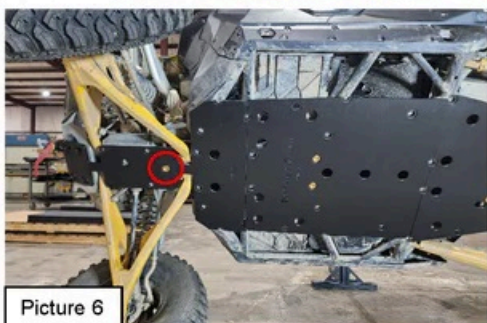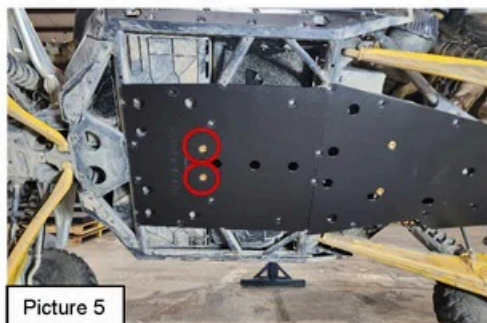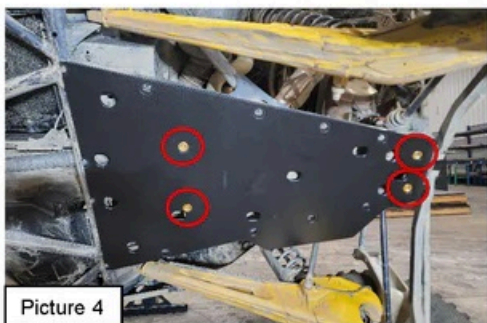



- G. Next locate the metal slider brackets. One will have a D cut into it and that is for the Driver side. The other will have a P cut into it and that is for the Passenger side. Locate and install (6) U-nuts (**100110**). Install the U-nuts on the slotted holes in the bracket (3) per side. See (Picture 7) for orientation of U-nuts.
- H. Install the Driver side slider bracket with (2) ¼-20x1-1/4" TEK screws (**100148**) and (2) Bowl washers (**100087**). (Picture 8) Next install the Passenger side slider bracket with (2) ¼-20x1-1/4" TEK screws (**100148**) and (2) Bowl washers (**100087**). (Picture 9).

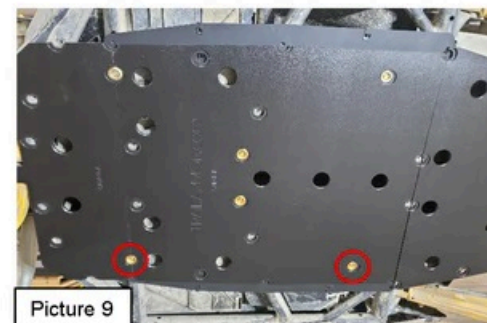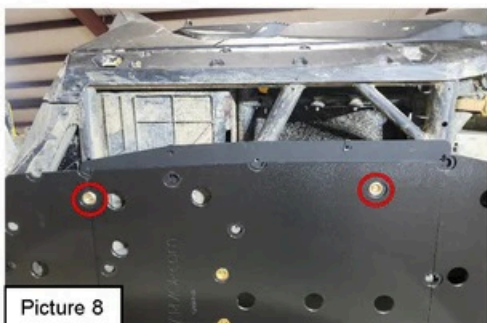


- I. Locate Panel D. Install it with (2) 1" Serrated flange bolts (100048) and (2) Bowl washers (100087) (Picture 10).
- J. Locate Panel E. Install it with (2) 1" Serrated flange bolts (100048) and (2) Bowl washers (100087) (Picture 11).




- K. Moving back to Panel C. Locate and install (12) 1/4-20x1-1/4" TEK screws (100148) and (12) Bowl washers (100087). See Picture 12.
- L. Locate (20) 1/4-20x1-1/4" TEK screws (100148) and (20) Bowl washers (100087). Install per Picture 13.
- M. Locate (2) 1/4-20x1-1/4" TEK screws (100148) and (2) Bowl washers (100087). Install per Picture 14 in **RED**. Locate (2) 1" Serrated flange bolts (100048) and (2) Bowl washers (100087). Install per Picture 14 in **GREEN**.

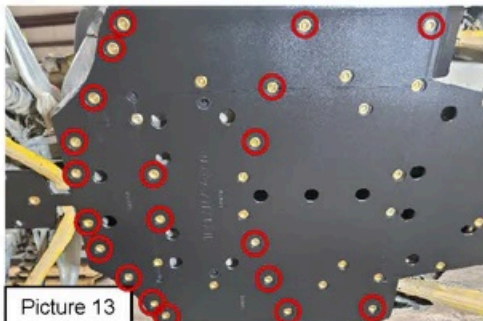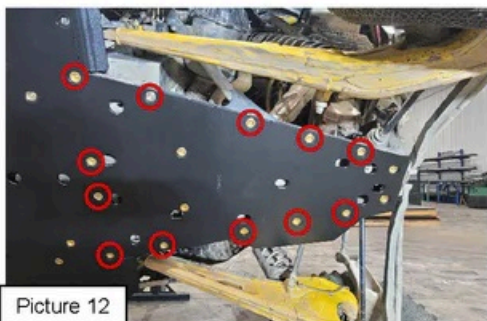

- N. Next locate a drill and a 7/32" drill bit. Drill the (4) holes shown in Picture 15. Install (4) 3/4" thread cutting screws (**100108**) and (4) bowl washers (**100087**). See Picture 16.

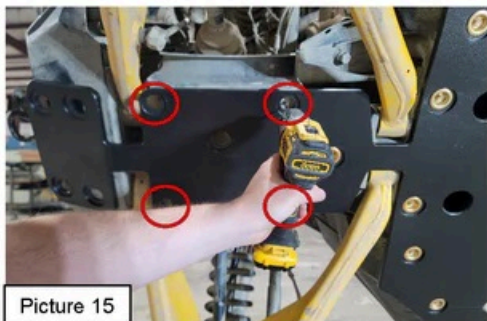


Picture 15

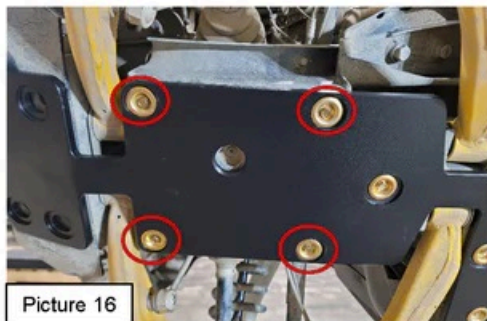

Picture 16

- O. Moving to the front of Panel A drill out the (4) OEM installed pop rivets and insert (4) 1/4-20x1-1/4" TEK screws (**100148**) and (4) Bowl washers (**100087**). See Picture 17.
- P. See Picture 18 for Final Install.

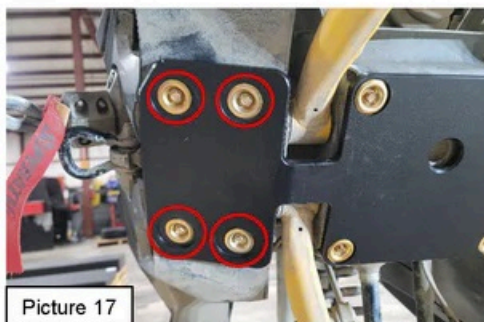

Picture 17



Picture 18