




TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions


## Can Am Maverick R Front Inner Fender Liners TAFENDERLINER-CAM-R

### Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.

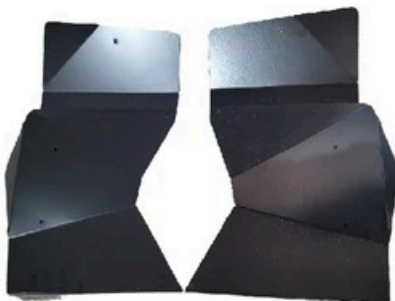


- A. You will need to remove (6) OEM rivets in the OEM skid plate. See Picture 1.
- B. Locate and remove (4) OEM bolts. (Shown in Picture 2).

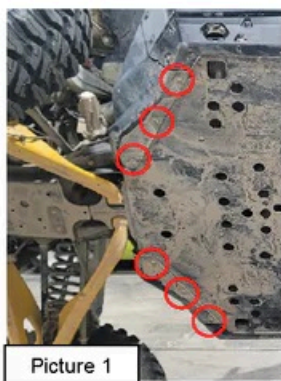

Picture 1



Picture 2

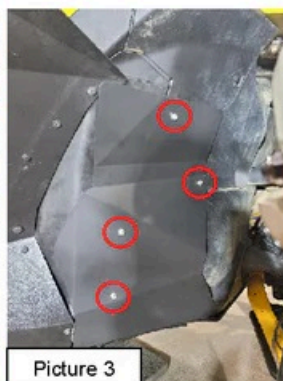

Picture 3



Picture 4

- C. Locate the Passenger Side fender liner and (4) M6-1.0x25mm bolts (**100286**) and insert per Picture 3.
- D. Locate and install (3) 1 1/4" TEK Screws (**100148**). (See Picture 4).
- E. Repeat steps B through D for the driver's side.

Enjoy! Any questions, contact Trail Armor at 662-233-5700.