




TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

Trail Armor Kawasaki Teryx5-H2 Full Skids TA012FULLSKID-KAW-TERYX5-H2

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. All Trail Armor products are designed, engineered, and fit to new vehicles and their specifications. Damage, modifications, and extreme wear may cause and require modifications to the product and/or your vehicle to insure proper fitment.

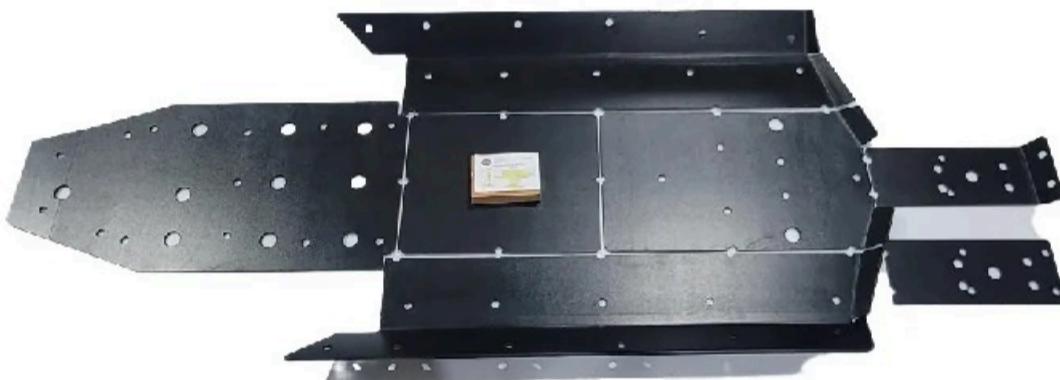

Picture 1



Picture 2


- A. Remove OEM hardware and plastic skids at the rear of the machine and discard. Leave all metal plates intact. Remove (2) OEM bolts **shown in yellow** from the rear metal plate in Picture 1. Also remove the 12 OEM Phillip head screws shown in red in Picture 1. **Note: There are 6 screws shown in red on driver side and you will need to remove the same 6 screws on the passenger side.** Also, some factory holes on this machine were not threaded. You will need a M6x1.0 tap to thread some of the factory holes.
- B. Locate Panel D of the Trail Armor skid set. Also, locate (1) supplied M6-1.0 x 25 mm bolt (**100286**) and (1) supplied bowl washer (**100087**). Holding Panel D into position, insert (1) bolt and washer into the hole shown in Picture 2. Loosely tighten.



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions


- C. Locate Panel C of the skid set. Also locate (2) supplied M6-1.0 x 25 mm bolts (**100286**) and (2) supplied bowl washers (**100087**). Holding Panel C in position, insert the (2) bolts and washers into the holes shown in Picture 3. Loosely tighten.
- D. Locate Panel B of the skid set. Also locate (1) supplied M6-1.0 x 25 mm bolt (**100286**) and (1) supplied bowl washer (**100087**). Slide Panel B underneath the center washer of Panel C. Holding Panel B in position, insert (1) bolt and washer at the front center of Panel B. See Picture 4. Loosely tighten.
- E. Locate Panel A or Panel A1 of the skid set. The smaller Panel A is used when running a bumper. Panel A1 is used for extra protection. Also locate (2) supplied M6-1.0 x 20 mm bolts (**100018**) and (2) supplied bowl washers (**100087**). Holding Panel A into position, insert (2) bolts and washers into the holes shown in Picture 5. Align all panels and tighten securely. **DO NOT OVERTIGHTEN!**

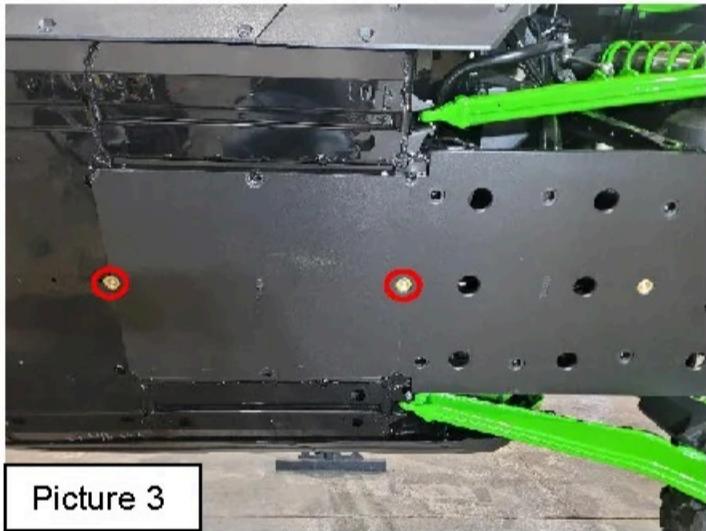

Picture 3



Picture 4

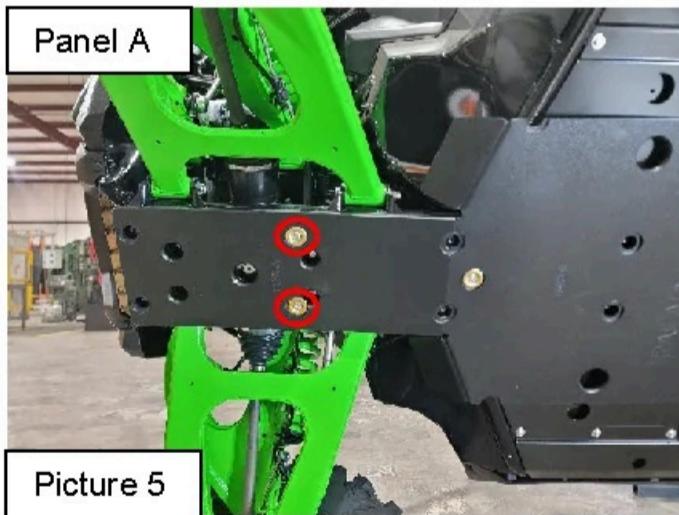

Picture 5



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions



Picture 6




Picture 7

- F. Locate Panel F of the skid set. Also locate (1) supplied M6-1.0 x 25 mm bolt (**100286**) and (1) supplied bowl washer (**100087**). Holding Panel F into position, insert (1) bolt and washer into the hole shown in Picture 6. Align Panel F with the center skids and tighten securely. DO NOT OVERTIGHTEN!
- G. Locate Panel E of the skid set. Also locate (1) supplied M6-1.0 x 25 mm bolt (**100286**) and (1) supplied bowl washer (**100087**). Holding Panel E into position, insert (1) bolt and washer into the hole shown in Picture 7. Align Panel E with the center skids and tighten securely. DO NOT OVERTIGHTEN!
- H. Moving to the rear of the machine Panel D, locate and install (10) supplied M6-1.0 x 25 mm bolts (**100286**) and (10) supplied bowl washers (**100087**). **Shown in Red**. See Picture 8. Locate and insert (2) M6-1.0 x 30 mm bolts (**100294**) and (2) supplied bowl washers (**100087**) into the remaining holes of Panel D **shown in Yellow**. See Picture 8.



Picture 8

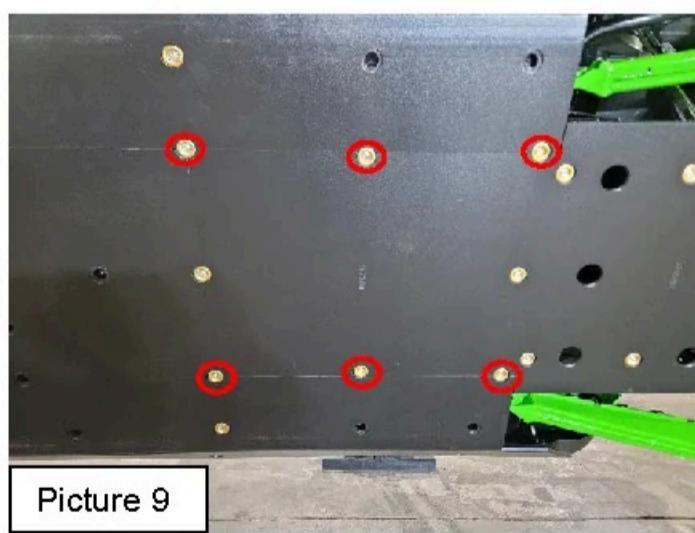

Picture 9




TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions


- I. Move to Panel C, locate and install (6) supplied M6-1.0 x 25 mm bolts (**100286**) and (6) supplied bowl washers (**100087**). As shown in Picture 9.
- J. Move to Panel B, locate and install (5) supplied M6-1.0 x 25 mm bolts (**100286**) and (5) supplied bowl washers (**100087**). As shown in Picture 10.
- K. If installing Panel A, locate and install (4) supplied M6-1.0 x 25 mm bolts (**100286**) and (4) supplied bowl washers (**100087**). As shown in Picture 11.
- L. If installing Panel A1, locate and install (2) supplied M6-1.0 x 25 mm bolts (**100286**) and (2) supplied bowl washers (**100087**). **Shown in red**. See Picture 12. Locate and install (2) supplied 1" Tek screws (**100054**) and (2) supplied bowl washers (**100087**). **Shown in yellow**. See Picture 12.



Picture 10

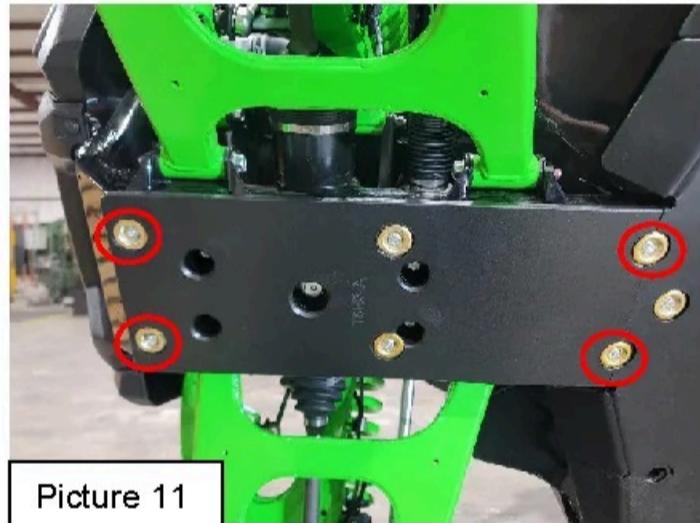

Picture 11

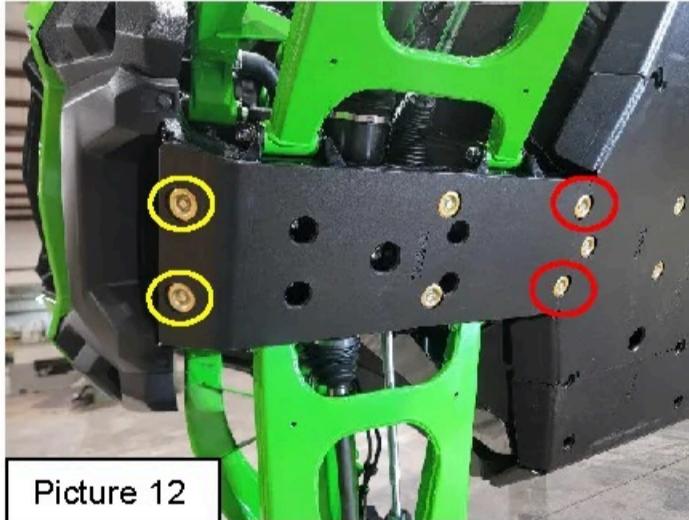

Picture 12



TRAILARMOR.COM
839 HWY 2 CORINTH, MS 38834
(662) 233-5700

Installation Instructions

- M. Move to Panel F, Locate and install (3) supplied M6-1.0 x 25 mm bolts (**100286**) and (3) supplied bowl washers (**100087**). See Picture 13. Locate and install (6) supplied M6-1.0 x 40 mm bolts (**100144**) and (6) supplied bowl washers (**100087**) See Picture 14. Locate and install (3) supplied 1-1/4" Tek screws (**100148**) and (3) supplied bowl washers (**100087**). See Picture 15.
- N. Repeat Step M for Panel E. See Picture 16 for Final Install.



Picture 13



Picture 14



Picture 15



Picture 16