



TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

## Trail Armor Kawasaki Teryx5 H2 Trailing Arm Guards TA012IMPTAG-KAW-TERYX5-H2


### Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation. **PLEASE NOTE:** This product was designed, fit and tested on new vehicle specifications. Any damage, modifications or excessive wear to your vehicle may require modification to the product and/or your vehicle to ensure proper fitment.



### For Rear Guards:

- A. Locate the driver side trailing arm guard (KAW-H2-DR). Also, locate (2) supplied 1-1/4" Tek screws (**100148**) and (2) supplied bowl washers (**100087**). Holding the guard into position, insert the screws through the holes of the guard, into the OEM holes. Shown in Picture 1. Loosely tighten.

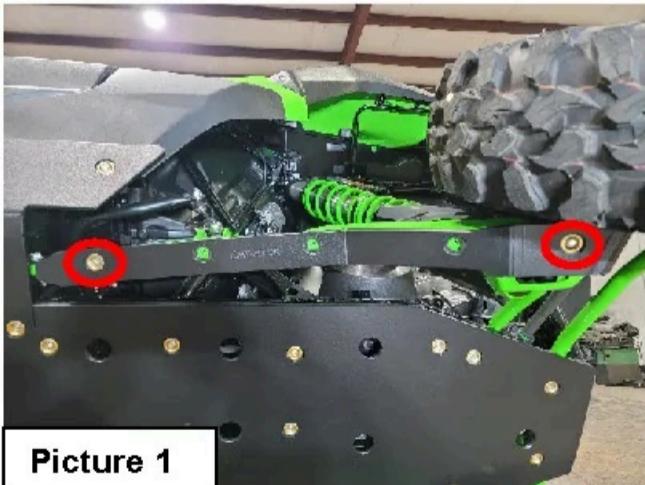


Picture 1



TRAILARMOR.COM  
839 HWY 2 CORINTH, MS 38834  
(662) 233-5700

# Installation Instructions

- B. Locate a 3/16" drill bit and drill. Predrill the 3 holes shown in Picture 2.
- C. Locate (3) supplied 1-1/4" Tek screws (100148) and (3) supplied bowl washers (100087). Insert one screw and washer into each previously drilled holes. Shown in Picture 3. Make sure the guard is properly aligned and tighten all hardware.
- D. Repeat Steps A through C for the passenger side. See Picture 4 for final installation.

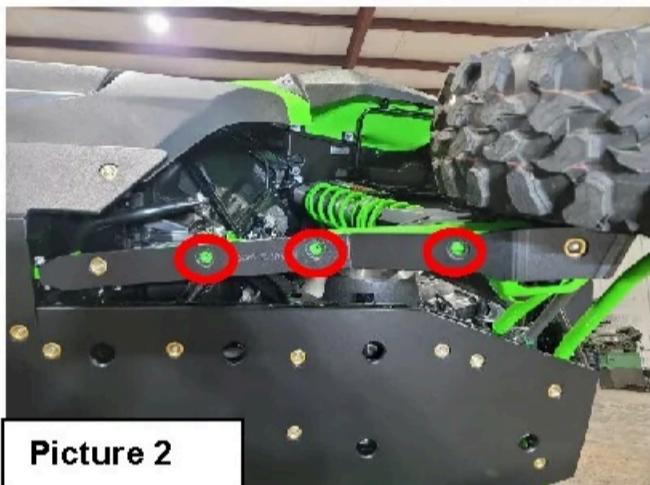

Picture 2



Picture 3



Picture 4